# 83-140 Grille on air inlet removal and installation

# A. Up to 03/93

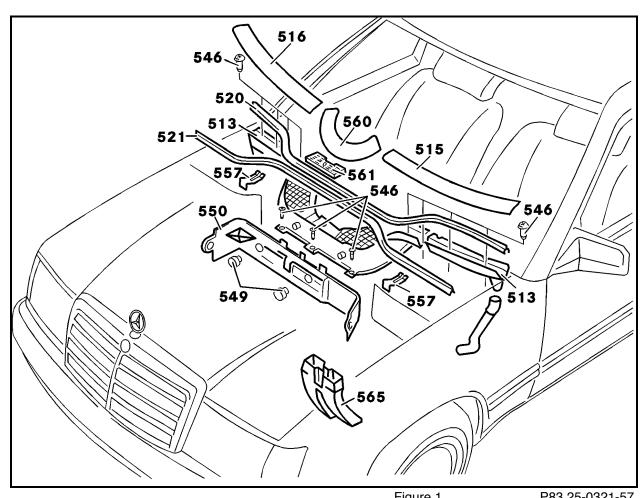


Figure 1	P83.25-0321-57

Moldings (520, 521)	remove, install (figure 1).
Fascia (515, 516)	remove, install.  Installation note  Check for correct seating of all rubber lips (figure 2).
Clips (557)	remove, install (figure 3).
Screw (546)	unscrew, remove water flows (513).  Installation note  Check for correct assembly of water flows and drain tubes (figure 4).
Cover (560)	from, attach (figure 5).
Screw (549)	solve, dress (figure 6).

- 1 Moldings (520, 521) pull-off. Position wiper in middle. Extract and remove.
- 2 Fascia (515, 516) with plastic edge lift upward under the rubber lip at the wiper.

### **Installation note**

Check for correct seating of all rubber lips at the A-pillars and at the wiper linkage.

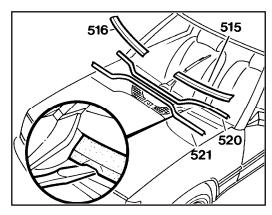


Figure 2

P83-2183-13

3 Clips (557).

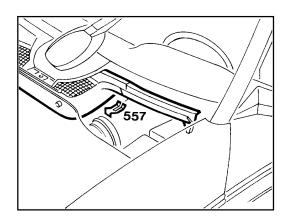


Figure 3

P83-2184-13

4 Screws (546) unscrew. Remove water flows (513) to the left and to the right.

### **Installation note**

Check for correct assembly of water flows and drain tubes.

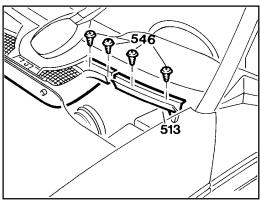


Figure 4

P83-2185-13

5 Wipers in park position and remove cover (560).

(W124, not shown are four screws that are holding a half ring down. Remove all four prior to removing cover (560).)

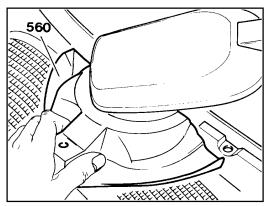


Figure 5

e 5 P83-2186-13

- 6 Screws (549) unscrew at middle divider (550) take out. Remove.
- 7 Screws (546) unscrew from cover at the air entrance. Remove.

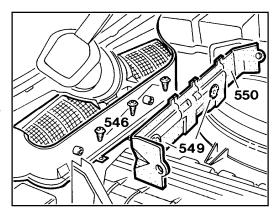


Figure 6

P83-2188-13

During Installation of Foliage Grille.

Insert flow rubber (570) in water canal (565) with a screwdriver through the foliage grille. Form a unit in reversed sequence.

(NA W124, these parts may not be present.)

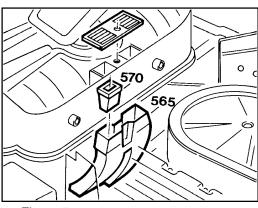


Figure 7

P83-2189-13

## B. From 04/93

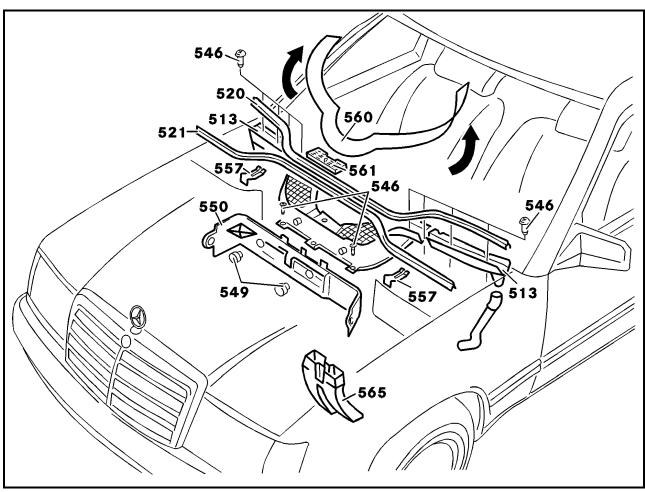


Figure 1 P83.25-0320-57

sealing (560)	Installation note Check for correct seating of all rubber lips (figure 2).
Clips (557)	extract, insert (figure 3).
Screw (546)	unscrew, water flows (513). Installation note
	Check for correct assembly of water flows and drain tubes (figure 4).
Cover (560)	.insert, attach.
Screw (549)	unscrew. screw (figure 5).

Divider (550)......Insert.

Installation note
Reference (Figure 5).

- 1 Sealing (520, 521) draw-off. Position wiper in middle. Extract and remove.
- 2 Sealings (560) with plastic wedge pull, outward under the rubber lip at the wiper.

#### **Installation note**

Check for correct seating of all rubber lips at the A-pillars and at the wiper linkage. Remove.

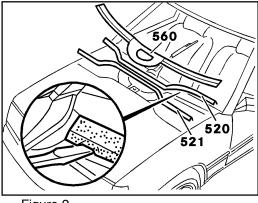


Figure 2 P83-0322-13

3 Clips (557).

(Fragile, one on each side.)

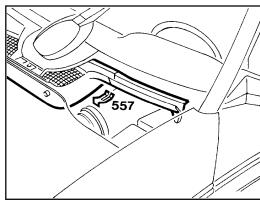


Figure 3 P83-2184-13

4 Screws (546) unscrew. Decrease water flows (513) to the left and to the right.

### **During Installation**

Check for correct assembly of water flows and drain tubes.


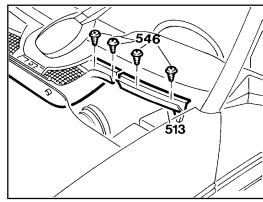


Figure 4 P83-2185-13

- 5 Screws (549) unscrew and middle divider (550) take out.
- 6 Screws (546) unscrew and cover at the air entrance. Form a unit in reversed sequence.

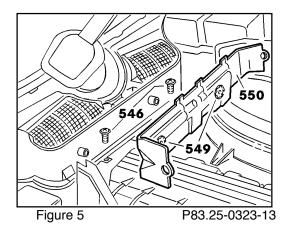

### **Installation note**

Check for correct seating of the water flows (565).

(NA W124, this part may not be present.)

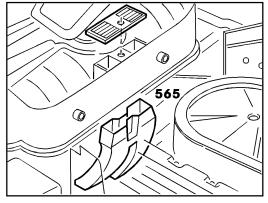


Figure 6

P83.25-0324-13