



A1	Instrument cluster	2M 15M 18M
A1e5	Generator charge indicator lamp	2M
A1e16	Preglow indicator lamp	16M
A1p1	Engine coolant temperature gauge	19M
B11/7	Preglow system temperature sensor	18A
B13	Engine coolant temperature gauge sensor	19A
F1	Fuse and relay box	
F1-B	Fuse B, terminal 15	7B
F1-5	Fuse 5, terminal 15	9B
F1-7	Fuse 7, terminal 15	3L 17L
F1-9	Fuse 9, terminal 30	4L
F1-10	Fuse 10, terminal 30	3L
G1	Battery	4A
G2	Generator	2A
K1/1	Overvoltage protection relay module (87E, 7-pole)	21M
K38	Starter lock-out relay module (ATA)	10A
M1	Starter	5A
N7	Exterior lamp failure monitoring module	1M
N14	Preglow time-limit relay module	14A
N26	Anti-theft alarm control module	12A
R9	Glow plugs	14E
S1	Exterior lamp switch	4M
S2/2	Glow/starter switch	8M
S16/1	Starter lock-out/backup lamp switch	12M
S26/1	Heated windshield washer system thermoswitch	14M

W1	Main ground (behind instrument cluster)	
W9	Ground (at left headlamp unit)	
W10	Ground (battery)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (terminal 30, interior)	4H
X4/10	Terminal block (terminal 30/ terminal 61 battery) (3-pole)	1H
X25	Preglow harness connector	17E
X26	Interior/engine connector (12-pole)	15F
X27	Starter harness connector	5E
X42	Anti-theft alarm connector (front/rear)	10E
X49/2	Backup lamp/starter lock-out switch connector	11H
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

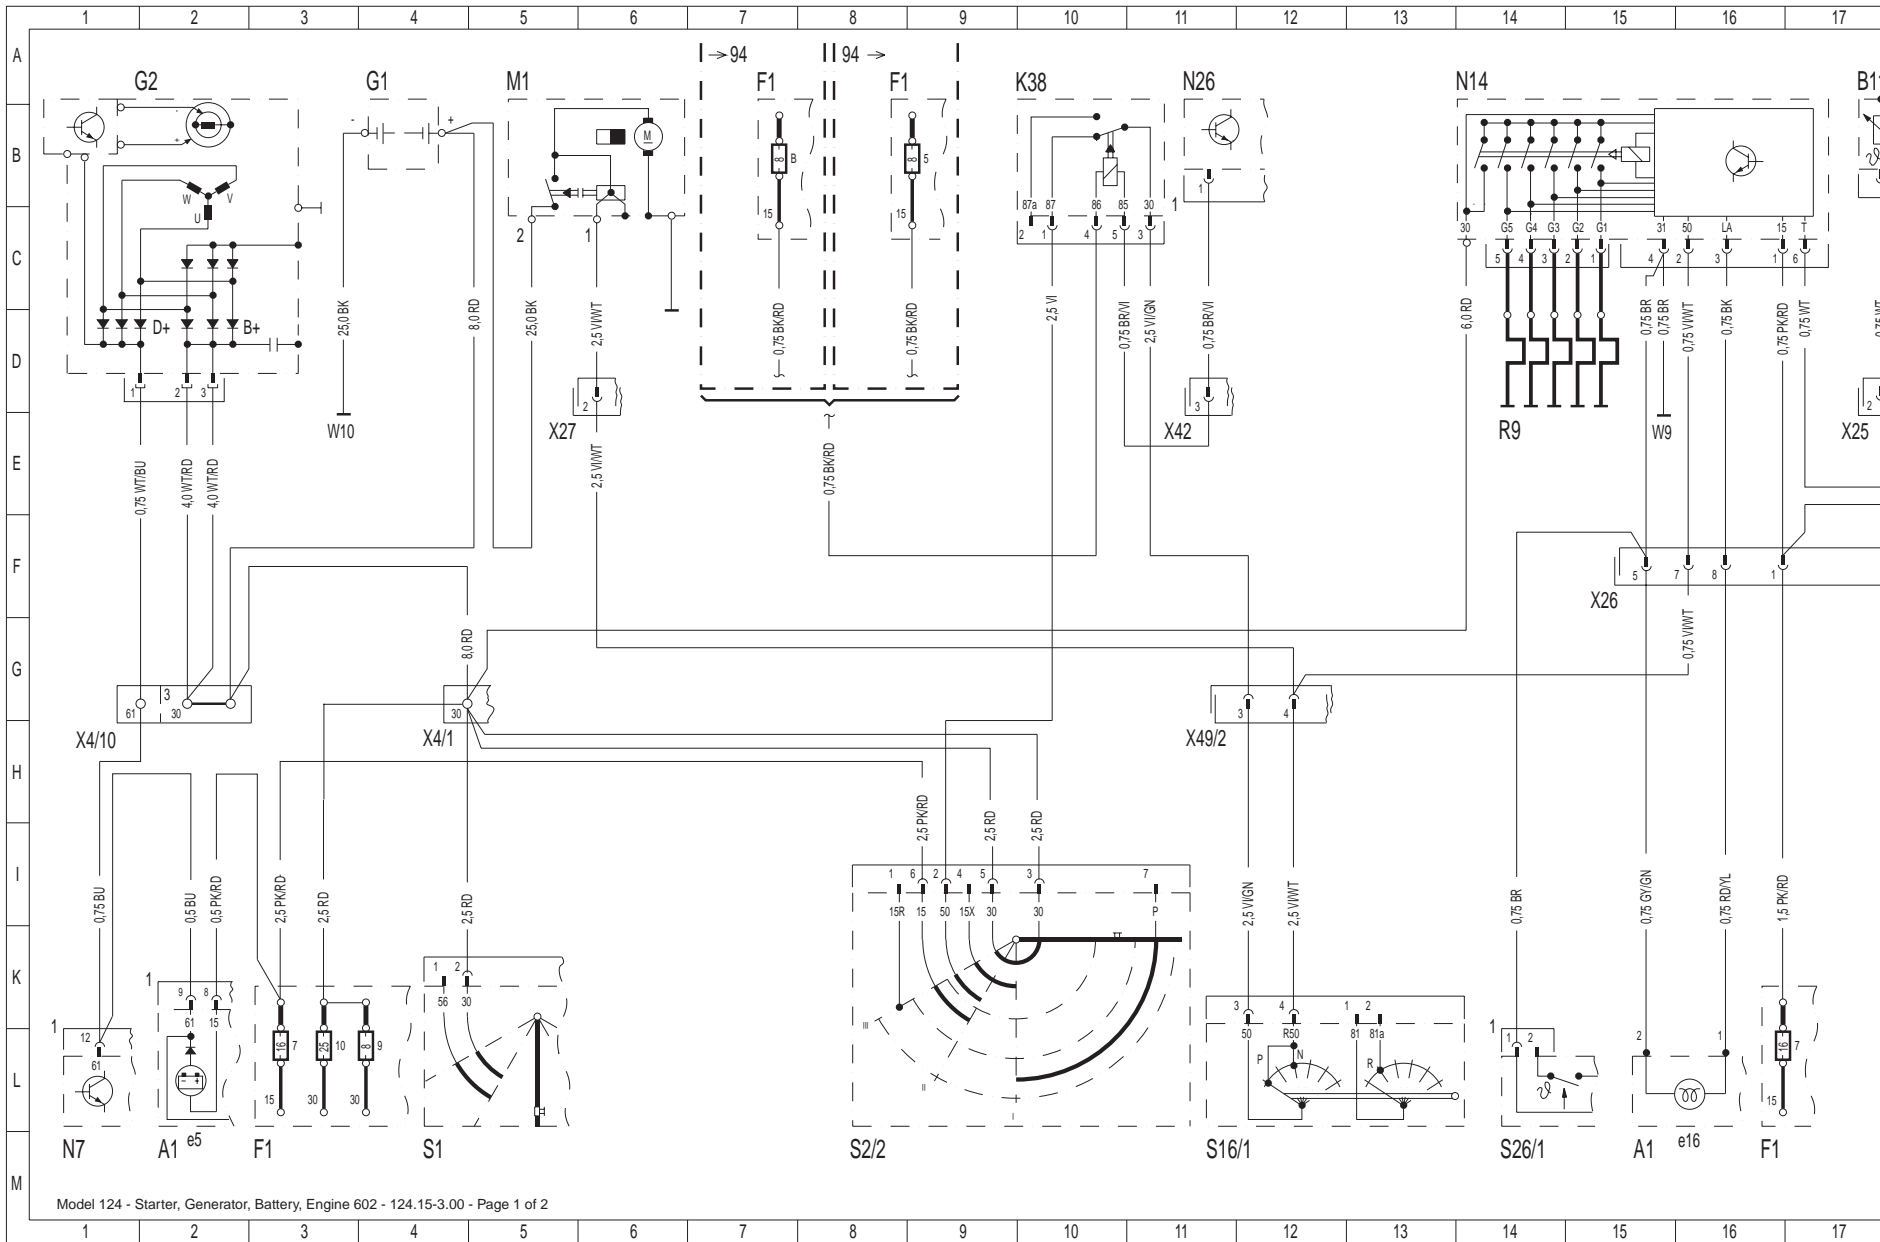

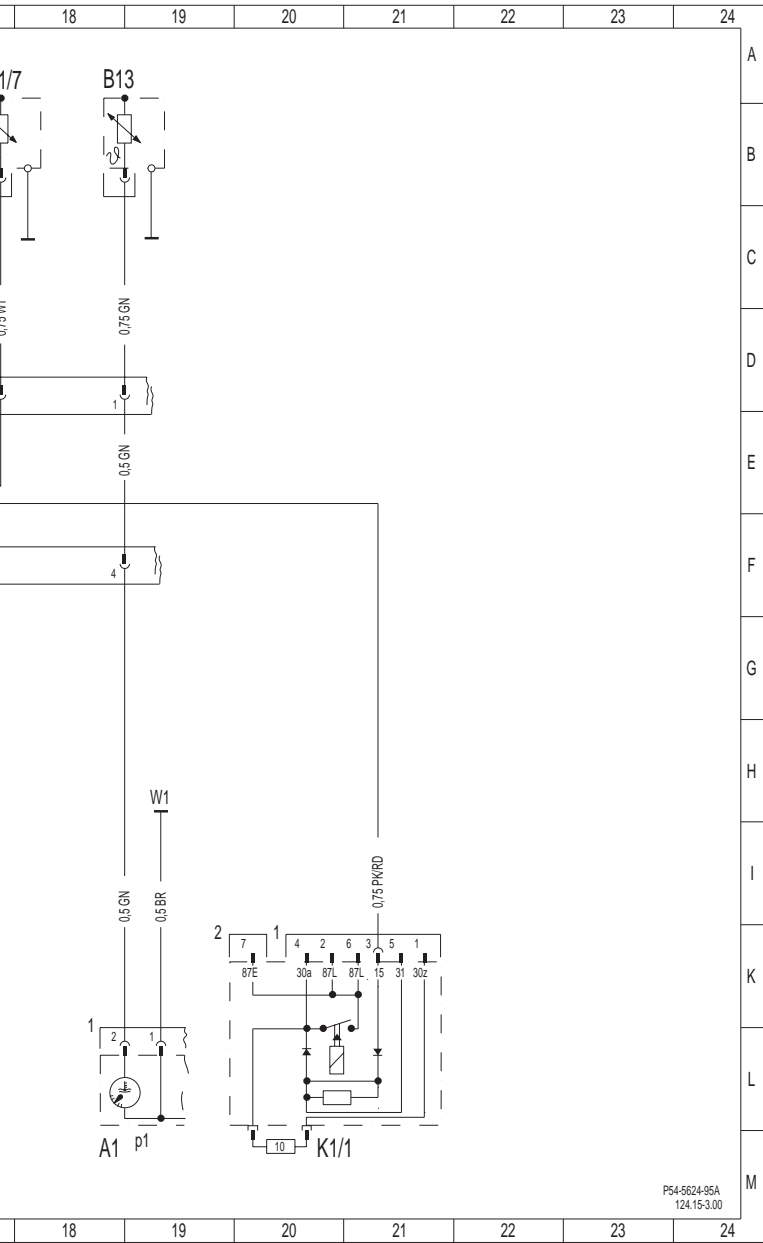

PS4-5624-95A
124.15-3.00