

A1	Instrument cluster	2M 14M
A1e5	Generator charge indicator lamp	2M
A1e16	Preglow indicator lamp	15M
A1p1	ECT gauge	14M
B11/8	ECT sensor (preglow system)	12M
F1	Fuse and relay box	
F1-B	Fuse B, circuit 15	10B
F1-5	Fuse 5, circuit 15	11B 13L
F1-6	Fuse 6, circuit 15	3L
F15	Auxiliary fuse holder (A/C blower motor)	7M
G1	Battery	4A
G2	Generator	2A
K38	Starter lock-out relay module	8A
M1	Starter	5A
N7	Exterior lamp failure monitoring module	1M
N14	Preglow time-limit relay module	13A
N26	ATA control module	7A
R9	Glow plugs	13F
S2/2	Glow/starter switch	8M
S16/1	Starter lock-out/backup lamp switch	5M
W1	Main ground (behind instrument cluster)	
W10	Ground (battery)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (circuit 30, interior)	10H

X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	1H
X26	Interior/engine connector (12-pole)	12H
X26/20	Engine/chassis connector (ECT sensor) (4-pole)	12I
X27	Starter harness connector	6E
X42	ATA connector (front/rear)	7D
X42/18	Starter lock-out intermediate connector (terminal 50)	11D
X49/2	Backup lamp/starter lock-out switch connector	6I
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

