

124.27-3.00	4-Speed Automatic Transmission (AT), Engine 104 with HFM-SFI	As of MY 1993	Page 1 of 1
-------------	--	---------------	-------------

F1	Fuse and relay box	
F1-7	Fuse 7, circuit 15	6B
K38	Starter lock-out relay module	8M
M1	Starter	1M
N3/4	Engine control module (HFM-SFI)	2M
N4/1	EA/CC/ISC control module	4A
		5M
N4/3	CC/ISC control module	4M
N6	A/C compressor control module	3M
N7	Exterior lamp failure monitoring module	5A
S2/1	Ignition/starter switch	6M
S16/1	Starter lock-out/backup lamp switch	1A
S16/5	Transmission mode switch	8A
S16/6	Kickdown switch	6A
W12	Ground (center console)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (circuit 30, interior)	6I
X26	Interior/engine connector (12-pole)	2G
X27	Starter harness connector	1I
X42/18	Starter lock-out intermediate connector (terminal 50)	9I
X49/2	Backup lamp/starter lock-out switch connector	1E
X49/3	Backup lamp switch signal connector (ASR/EA)	4D
	(1-pole)	
X81/4	Engine/chassis harness connector (EA/CC)	4I
		5I
Y3	Kickdown valve (AT)	8A
Y3x1	Kickdown valve connector (AT)	7D

Y4	Transmission mode switchover valve	9A
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

