

124.27-5.00	4-Speed Automatic Transmission (AT)	Engine 602, MY 1993 Engine 606, As of MY 1995	Page 1 of 1
-------------	-------------------------------------	--	-------------

F1	Fuse and relay box	
F1-7	Fuse 7, circuit 15	4B
K38	Starter lock-out relay module	5M
M1	Starter	1M
N6	A/C compressor control module	5A
N7	Exterior lamp failure monitoring module	3A
N14	Preglow time-limit relay module	3M
S2/2	Glow/starter switch	4M
S16/1	Starter lock-out/backup lamp switch	1A
S16/6	Kickdown switch	6A
Grounds not indicated, components are connected on engine block or bodywork		
X4/1	Terminal block (circuit 30, interior)	5I
X26	Interior/engine connector (12-pole)	3H 5E
X27	Starter harness connector	1I
X49/2	Backup lamp/starter lock-out switch connector	1E
Y3	Kickdown valve (AT)	7A
Y3x1	Kickdown valve connector (AT)	7C
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		

