

A1 Instrument cluster 8M 18M	N59 Diagnostic module (OBD I) 19M	X81/5 Engine/chassis harness connector (EA/CC) 17I (California) (4-pole)
A1e17 ABS MIL 9M	S9/1 Stop lamp switch (4-pole) 11M	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.
A1e26 "CHECK ENGINE" MIL 18M	S16/9 Transmission range "D" contact switch (5-speed automatic transmission) 15M	
A7 ABS hydraulic unit 5M	U2 Valid for (USA) California	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C
A7k1 Solenoid valve relay 7L	U30 Valid for diesel vehicles	
A7k2 Return/charging pump relay 5L	W10 Ground (battery)	Grounds not indicated, components are connected on engine block or bodywork
A7m1 Return/charging pump 4L	W14 Ground (ABS hydraulic unit bracket)	
A7y1 Left front axle solenoid valve 3K	X2/4 VSS connector (ABS/engine) (4-pole) 13F	
A7y2 Right front axle solenoid valve 3K	X4/1 Terminal block (circuit 30, interior) 6F	
A7y3 Rear axle solenoid valve 3L	X4/10 Terminal block (circuit 30/circuit 61 battery) (3-pole) 20D	
F1 Fuse and relay box	X11/21 Diagnostic module test connector (3-pole) (USA) - California 17M	
F1-5 Fuse 5, circuit 15 10L	X11/21s1 Pushbutton (with LED) (USA) - California 17L	
F1-6 Fuse 6, circuit 15 9L	X11/21x1 Diagnostic module test connector I - California 16K	
K1/1 Overvoltage protection relay module (87E, 7-pole) 24M	X12/3 Terminal block (circuit 15 unfused) (3-pole) 21F	
K1/2 Overvoltage protection relay module (87E/87L/30a, 9-pole) (Series K1/1) 20M	X20 Stop lamp switch intermediate connector (2-pole) 10L	
L6 Rear axle VSS sensor 25M	X22/5 5-speed AT/engine connector 15I	
L6x1 Rear axle VSS sensor connector 25K	X26 Interior/engine connector (12-pole) 19D	
L6/1 Left front axle VSS sensor 1M	X46 ABS MIL connector (1-pole) 8F	
L6/1x1 Left front axle VSS sensor connector 1L	X47 Rear axle VSS sensor harness connector (2-pole) (right footwell) 22F	
L6/2 Right front axle VSS sensor 2M	X62/3 Rear axle VSS sensor connector (ASR) (6-pole) 25F	
L6/2x1 Right front axle VSS sensor connector 2L	X81/4 Engine/chassis harness connector (EA/CC) 14I 17I	
N3/4 Engine control module (HFM-SFI) 13M		
N7 Exterior lamp failure monitoring module 12M		
N15/1 Transmission control module (TCM) (5-speed automatic) 14M		
N30 ABS control module 14A		



