

A45	Horn/airbag clock spring contact	8E
A45x1	Horn/airbag clock spring contact connector	8C
A45x2	FAN relay module clock spring contact connector	8F
F1	Fuse and relay box	
F1-6	Fuse 6, circuit 15	3L 6L 12L
F1-7	Fuse 7, circuit 15	9L
H2	Fanfare horns	2M 5M 8M 11M
K39	FAN relay module	6A
S4	Combination switch	5A
S4s6	Horn contact	5B
S4x1	Combination switch connector	5D
S4/2	FAN switch	8A
U30	Valid for diesel vehicles	
U58	Valid for all except coupè	
W1	Main ground (behind instrument cluster)	
W10	Ground (battery)	
W16/2	Ground (component compartment - generator/battery harness noise suppressor)	
	Grounds not indicated, components are connected on engine block or bodywork	
X24	Headlamp harness connector	1I 4I 7I 10I

<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>

