

124.68-1.00	Retractable Rear Head Restraints (RHR) and Rear Window Sun Shade	As of MY 1993	Page 1 of 1
-------------	--	---------------	-------------

F1	Fuse and relay box	
F1-B	Fuse B, circuit 15	5B
F1-1	Fuse 1, circuit 15R	5B
S52	RHR release switch	2M 7M
S79/3	Rear window sun shade microswitch	3M
U132	Valid for retractable rear head restraints (RHR) with rear window sun shade	
U133	Valid for retractable rear head restraints (RHR) only	
W1	Main ground (behind instrument cluster)	
	Grounds not indicated, components are connected on engine block or bodywork	
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	6E
X30	Accessory equipment connector block	8A
Y24/2	RHR release valve (with shut-off delay)	4M 6M
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

