

124.82-16.00	Windshield/Headlamp Cleaning System (HCS), Model 124.034/.036	As of MY 1993	Page 1 of 1
--------------	---	---------------	-------------

F1	Fuse and relay box	
F1-2	Fuse 2, circuit 15R	7L
F1-3	Fuse 3, circuit 58R	4L
F1-7	Fuse 7, circuit 15	8L
K2	HCS relay module	3A
K17	AIR relay module	9M
M5/1	Windshield washer pump	5A
M5/2	Headlamp washer pump	1M
M6/1	Wiper motor	6A
M6/2	Left headlamp wiper motor	1A
M6/2x1	Left headlamp wiper motor connector	1D
M6/3	Right headlamp wiper motor	2M
M6/3x1	Right headlamp wiper motor connector	2I
N10	Combination relay (turn/hazard signal, heated rear window, wiper motor)	8A
N16/1	Base module (BM)	8M
R2/2	Left heated windshield washer nozzle	15M
R2/2x1	Left heated windshield washer nozzle connector	14I
R2/3	Right heated windshield washer nozzle	11M
R2/3x1	Right heated windshield washer nozzle connector	12I
R2/4	Left heated washer nozzle hose	13M
R2/5	Right heated washer nozzle hose	12M
R2/6	Heated check valve	12F
R2/7	Heated windshield washer pump hose	13M
S4	Combination switch	5M
S4s4	Windshield washer pump switch	6K
S4s7	Intermittent wipe	6L
S4s8	Slow wipe	6L

S4s9	Fast wipe	5L
S4x1	Combination switch connector	5I
S26/1	Heated windshield washer system thermostwitch	12A
W1	Main ground (behind instrument cluster)	
W14	Ground (ABS hydraulic unit bracket)	
W16/2	Ground (component compartment - generator/battery harness noise suppressor)	
	Ground location without designation, component grounded directly on engine, chassis or body.	
X24	Headlamp harness connector	4F 5F
X26	Interior/engine connector (12-pole)	8I
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	

