


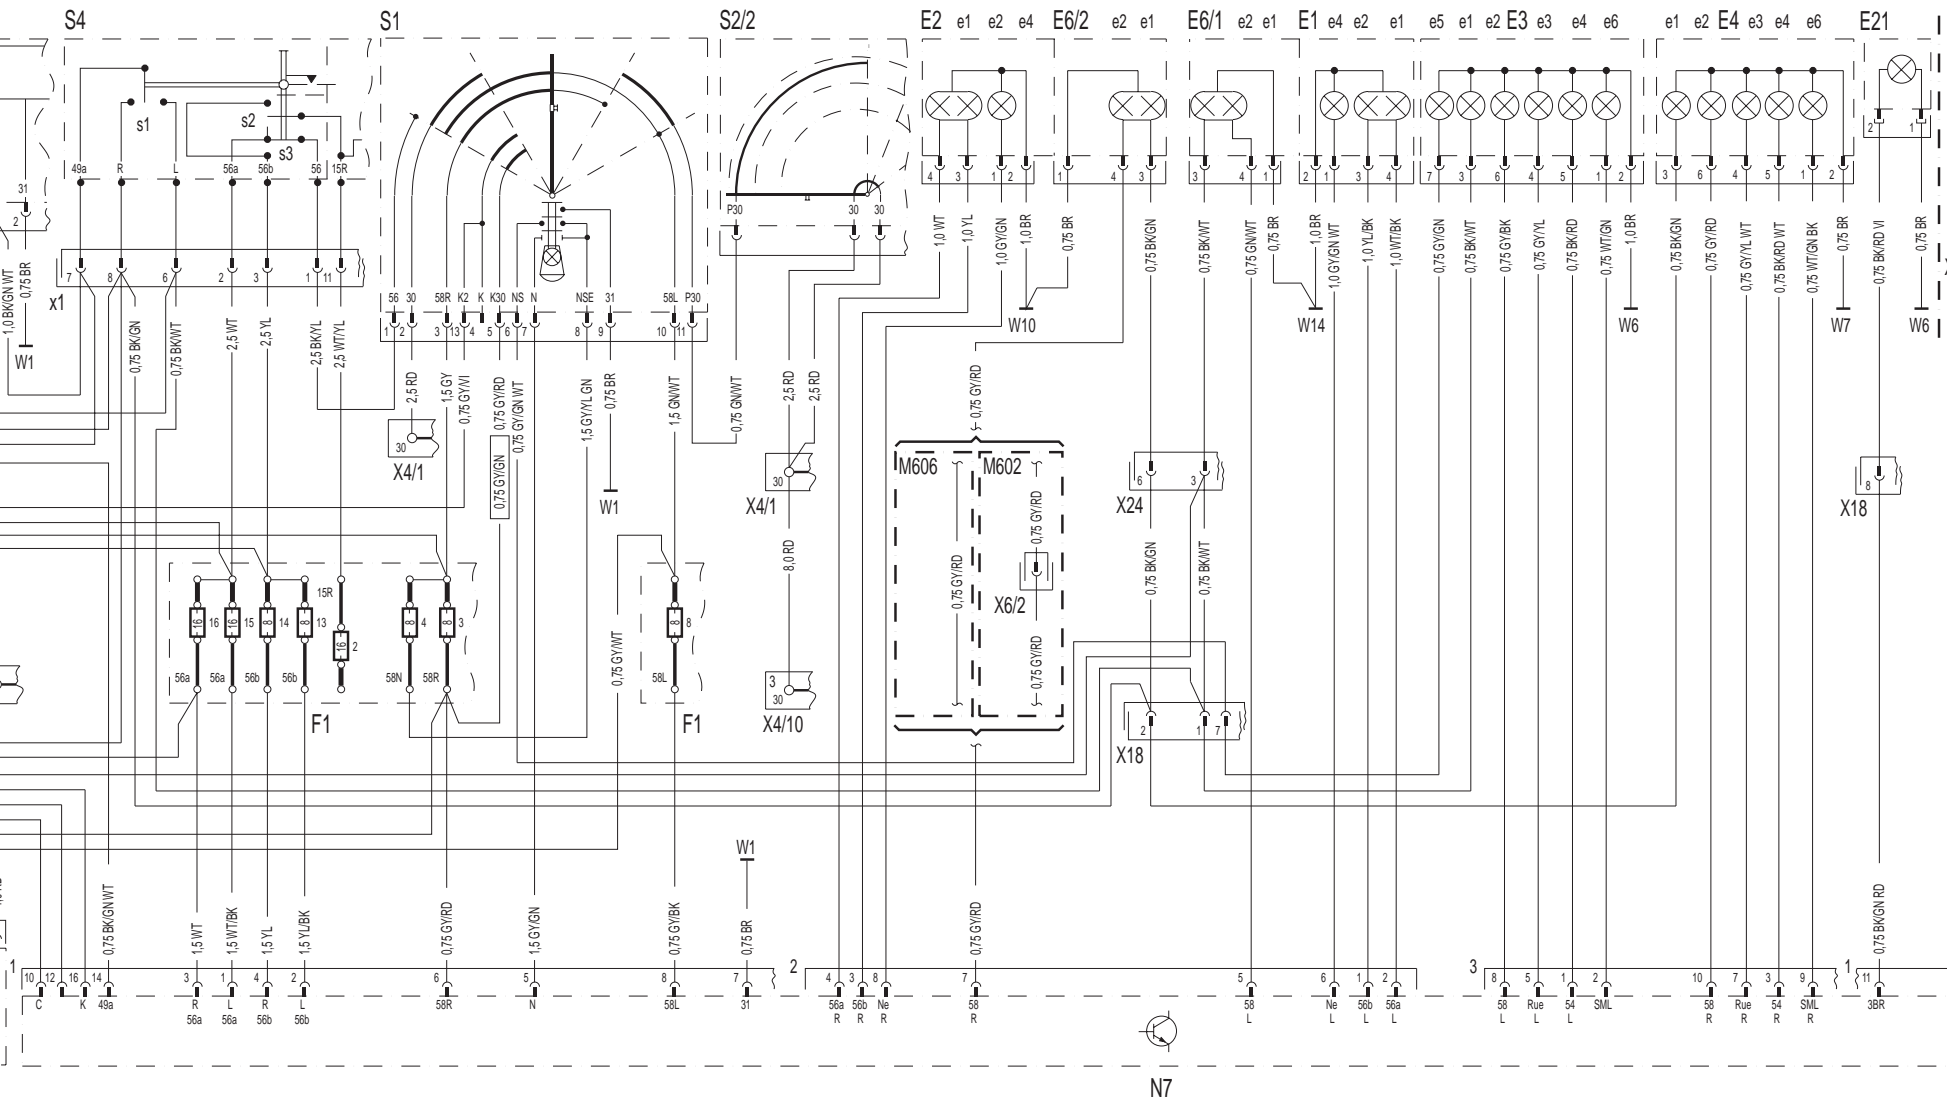
124.82-29.00	Exterior Lighting with Daytime Running Lamps, Sedan (Engines 602/ 606) ( <b>CDN</b> only)	MY 1993	Page 1 of 2
--------------	--	---------	-------------

A1 Instrument cluster 12M	E4e4 Stop lamp 34A	F1-5 Fuse 5, circuit 15 14G
A1e1 Left turn signal indicator lamp 13M	E4e6 Right hand side marker lamp 34A	
A1e2 Right turn signal indicator lamp 12M	E6/1 Left turn signal/side marker lamp <b>(USA)</b> 28A	F1-6 Fuse 6, circuit 15 2G
A1e3 High beam indicator lamp 12M	E6/1e1 Turn signal 29A	14G
A1e5 Generator charge indicator lamp 13M	E6/1e2 Side marker lamp <b>(USA)</b> 29A	F1-7 Fuse 7, circuit 15 37H
A1e14 Exterior lamp failure indicator lamp 14M	E6/2 Right turn signal/side marker lamp <b>(USA)</b> 27A	F1-8 Fuse 8, circuit 58 L 24G
A1h2 Audible turn signal indicator 12M	E6/2e1 Turn signal 28A	F1-9 Fuse 9, circuit 30 2G
A1r1 Instrument illumination rheostat 11M	E6/2e2 Side marker lamp <b>(USA)</b> 28A	F1-13 Fuse 13, circuit 56b 20G
A2/4 Radio control module 4A	E10/1 Center air outlet illumination 4A	F1-14 Fuse 14, circuit 56b 20G
B6 Hall-effect speed sensor 36H	E10/3 Right air outlet illumination 1M	F1-15 Fuse 15, circuit 56a 20G
E1 Left headlamp unit 29A	E15/2 Front dome lamp (with shut-off delay and front reading lamp) 10A	F1-16 Fuse 16, circuit 56a 19G
E1e1 High beam 30A	E17/3 Left front door entrance/exit lamp 4M	K5 ESA relay module <b>(USA)</b> 1M
E1e2 Low beam 30A	6M	K24 CF relay module 9A
E1e4 Fog lamp 29A	11A	M11 Automatic antenna (radio/telephone) <b>(USA)</b> 8M
E2 Right headlamp unit 26A	E17/4 Right front door entrance/exit lamp 3M	N2/4 Seat belt warning module <b>(USA)</b> 7A
E2e1 High beam 26A	7M	N4/1 EA/CC/ISC control module 35A
E2e2 Low beam 26A	E17/5 Left rear door entrance/exit lamp 12A	N7 Exterior lamp failure monitoring module 28M
E2e4 Fog lamp 27A	E17/6 Right rear door entrance/exit lamp 12A	N10 Combination relay (turn/hazard signal, heated rear window, wiper motor) 17A
E3 Left taillamp unit 31A	E18/1 Trunk lamp 9M	N26 ATA control module 5M
E3e1 Turn signal lamp 31A	E19/1 Left license plate lamp 39A	10M
E3e2 Tail/parking lamp 31A	E19/2 Right license plate lamp 38A	N35 Daytime running lamp control module 15M
E3e3 Backup lamp 31A	E21 Center high mounted stop lamp 34A	N40 Lighting dimmer module (circuit 58D) 1A
E3e4 Stop lamp 32A	F1 Fuse and relay box	N57 CF control module (power windows, sliding/pop-up roof) 11M
E3e5 Rear fog lamp 32A	F1-C Fuse C, circuit 30 8L	R3 Front cigar lighter (with ashtray illumination) 5M
E4 Right taillamp unit 33A	F1-2 Fuse 2, circuit 15R 21G	R3e1 Illumination 5A
E4e1 Turn signal lamp 33A	F1-3 Fuse 3, circuit 58R 22G	R3x1 Illuminated cigar lighter connector 5C
E4e2 Tail/parking lamp 33A	F1-4 Fuse 4, circuit 58N 21G	
E4e3 Backup lamp 33A		

124.82-29.00	Exterior Lighting with Daytime Running Lamps, Sedan (Engines 602/ 606) (  only)	MY 1993	Page 2 of 2
--------------	--	---------	-------------

S1	Exterior lamp switch	21A	X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	25H
S2/2	Glow/starter switch	24A	X6/1	Terminal block (circuit 58d) (1- or 2-pole)	1F 13E
S4	Combination switch	18A			
S4s1	Turn signal switch	19B	X18	Interior/taillamp harness connector (8-pole)	5H 28H 34F
S4s2	Headlamp flasher switch	20B			
S4s3	Low beam switch	20C			
S4x1	Combination switch connector	18D	X24	Headlamp harness connector	28F
S6	Hazard flasher switch	2A	X30	Accessory equipment connector block	8H
S8/2	Warning buzzer contact (exterior lamps/CL)	6A	X42/1	ATA diode holder	15A
S9/1	Stop lamp switch (4-pole)	37A	X42/2	Right rear door contact switch/dome lamp connector (ATA) (1-pole)	14E
S16/1	Starter lock-out/backup lamp switch	37A			
S17/3	Left front door switch	9A	X42/5	Right door contact switch connector (ATA)	3I
S17/4	Right front door switch	2M	X42/14	ATA connector (trunk lamp)	10I
S17/5	Left rear door switch	16A	X49/2	Backup lamp/starter lock-out switch connector	36E
S17/6	Right rear door switch	15A	X49/3	Backup lamp switch signal connector (ASR/EA) (1-pole)	35D
S17/8	Trunk lamp switch	9M			
S18	Rear dome lamp switch	13A	Z7	Circuit 30 connector sleeve	3I 6I 12E
W1	Main ground (behind instrument cluster)				
W6	Ground (left wheelhousing in trunk)				
W7	Ground (right wheelhousing in trunk)		Z81	Circuit 58d connector sleeve	2E 11I
W10	Ground (battery)				
W12	Ground (center console)				
W14	Ground (ABS hydraulic unit bracket)				
	Ground location without designation, component grounded directly on engine, chassis or body.				
X4/1	Terminal block (circuit 30, interior)	1H 17H 21F 24F			
				Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
				Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C	





N7

