


B6	Hall-effect speed sensor	2M	M14/2x2	Supply pump control line connector (CL/OSB)	20K	S88/2x1	Trunk lid lock switch connector (CF)	23K
E15	Dome lamp (with shut-off delay and reading lamp)	6M	N2/4	Seat belt warning module (USA)	6M	U13	Valid for Coup	
E15/4	Dome/reading lamp (with seat belt reminder lamp)	6M	N3/4	Engine control module (HFM-SFI)	30M	U23	Valid for cabriolet	
E18/1	Trunk lamp	12M	N4/3	CC/ISC control module	31M	U37	Valid for orthopedic seat backrest	
E19/1	Left license plate lamp	13M	N7	Exterior lamp failure monitoring module	4M	W1	Main ground (behind instrument cluster)	
E19/2	Right license plate lamp	13M	N26	ATA control module	20A	W6	Ground (left wheelhousing in trunk)	
E21	Center high mounted stop lamp	11M	N57	CF control module (power windows, sliding/pop-up roof)	22M	W10	Ground (battery)	
E33	ATA status indicator	1M				W12	Ground (center console)	
F1	Fuse and relay box		S2/1	Ignition/starter switch	32M	W14	Ground (ABS hydraulic unit bracket)	
F1-A	Fuse A, circuit 15	18L	S8/2	Warning buzzer contact (exterior lamps/CL)	16M	W33/1	Ground (tank partition wall - left)	
F1-B	Fuse B, circuit 15	28L	S8/2x1	Warning buzzer contact connector (exterior lamps/CL)	16K		Ground location without designation, component grounded directly on engine, chassis or body.	
F1-C	Fuse C, circuit 30	28L				X4/1	Terminal block (circuit 30, interior)	33H
F1-3	Fuse 3, circuit 58R	37L	S9/1	Stop lamp switch (4-pole)	2M	X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	33G
F1-5	Fuse 5, circuit 15	3L	S16/1	Starter lock-out/backup lamp switch	35M	X20	Stop lamp switch intermediate connector (2-pole)	1L
F1-8	Fuse 8, circuit 58 L	37L	S17/3	Left door switch	5M	X26	Interior/engine connector (12-pole)	30G
F1-11	Fuse 11, circuit 15T	38L	S17/4	Right door switch	9M	X27	Starter harness connector	36H
F1-12	Fuse 12, circuit 15X	39L	S17/8	Trunk lamp switch	12M	X30	Accessory equipment connector block	19M 29M
F1-14	Fuse 14, circuit 56b	38L	S47	Left door actuator	14M			
H3	Alarm horn	26M	S48	Right door actuator	15M	X34	Right front door contact switch intermediate connector	6H
K5	ESA relay module (USA)	7M	S49	Trunk lid lock actuator	17M			
K24	CF relay module	4M	S62	Engine hood switch (ATA)	27M	X34/1	Left front door contact switch intermediate connector	5E
K38	Starter lock-out relay module	33M	S62/1	Left door switch (ATA)	24M	X42	ATA connector (front/rear)	34H 37H
M1	Starter	36M	S62/1x1	Left door switch connector (ATA)	24K			
M14/1	Supply pump (CL)	20M	S62/2	Right door switch (ATA)	25M	X42/5	Right door contact switch connector (ATA)	5E
M14/1x1	Supply pump voltage supply connector (CL)	19K	S62/2x1	Right door switch connector (ATA)	25K	X42/13	ATA contact connector (radio) (1-pole)	4E
M14/1x2	Supply pump control line connector (CL)	20K	S62/7	Glove box switch (ATA)	9M	X42/14	ATA connector (trunk lamp)	11E
M14/2	Supply pump (CL/OSB)	20M	S62/11	Rear seat cushion switch (ATA)	10M	X42/18	Starter lock-out intermediate connector (terminal 50)	32H
M14/2x1	Supply pump voltage supply connector (CL/OSB)	19K	S88/2	Trunk lid lock switch (CF)	23M			

124.82-3.00	Anti-Theft Alarm System (ATA), Coup , Cabriolet	As of MY 1993	Page 2 of 2
-------------	---	---------------	-------------

X43	ATA connector (CL system) (3-pole)	20H
X49/2	Backup lamp/starter lock-out switch connector	35H
X81/4	Engine/chassis harness connector (EA/CC)	31H
Y24/3	Seat backrest locking valve	8M
Z2	Circuit TD connector sleeve	39F
Z7	Circuit 30 connector sleeve	17G
<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>		
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>		

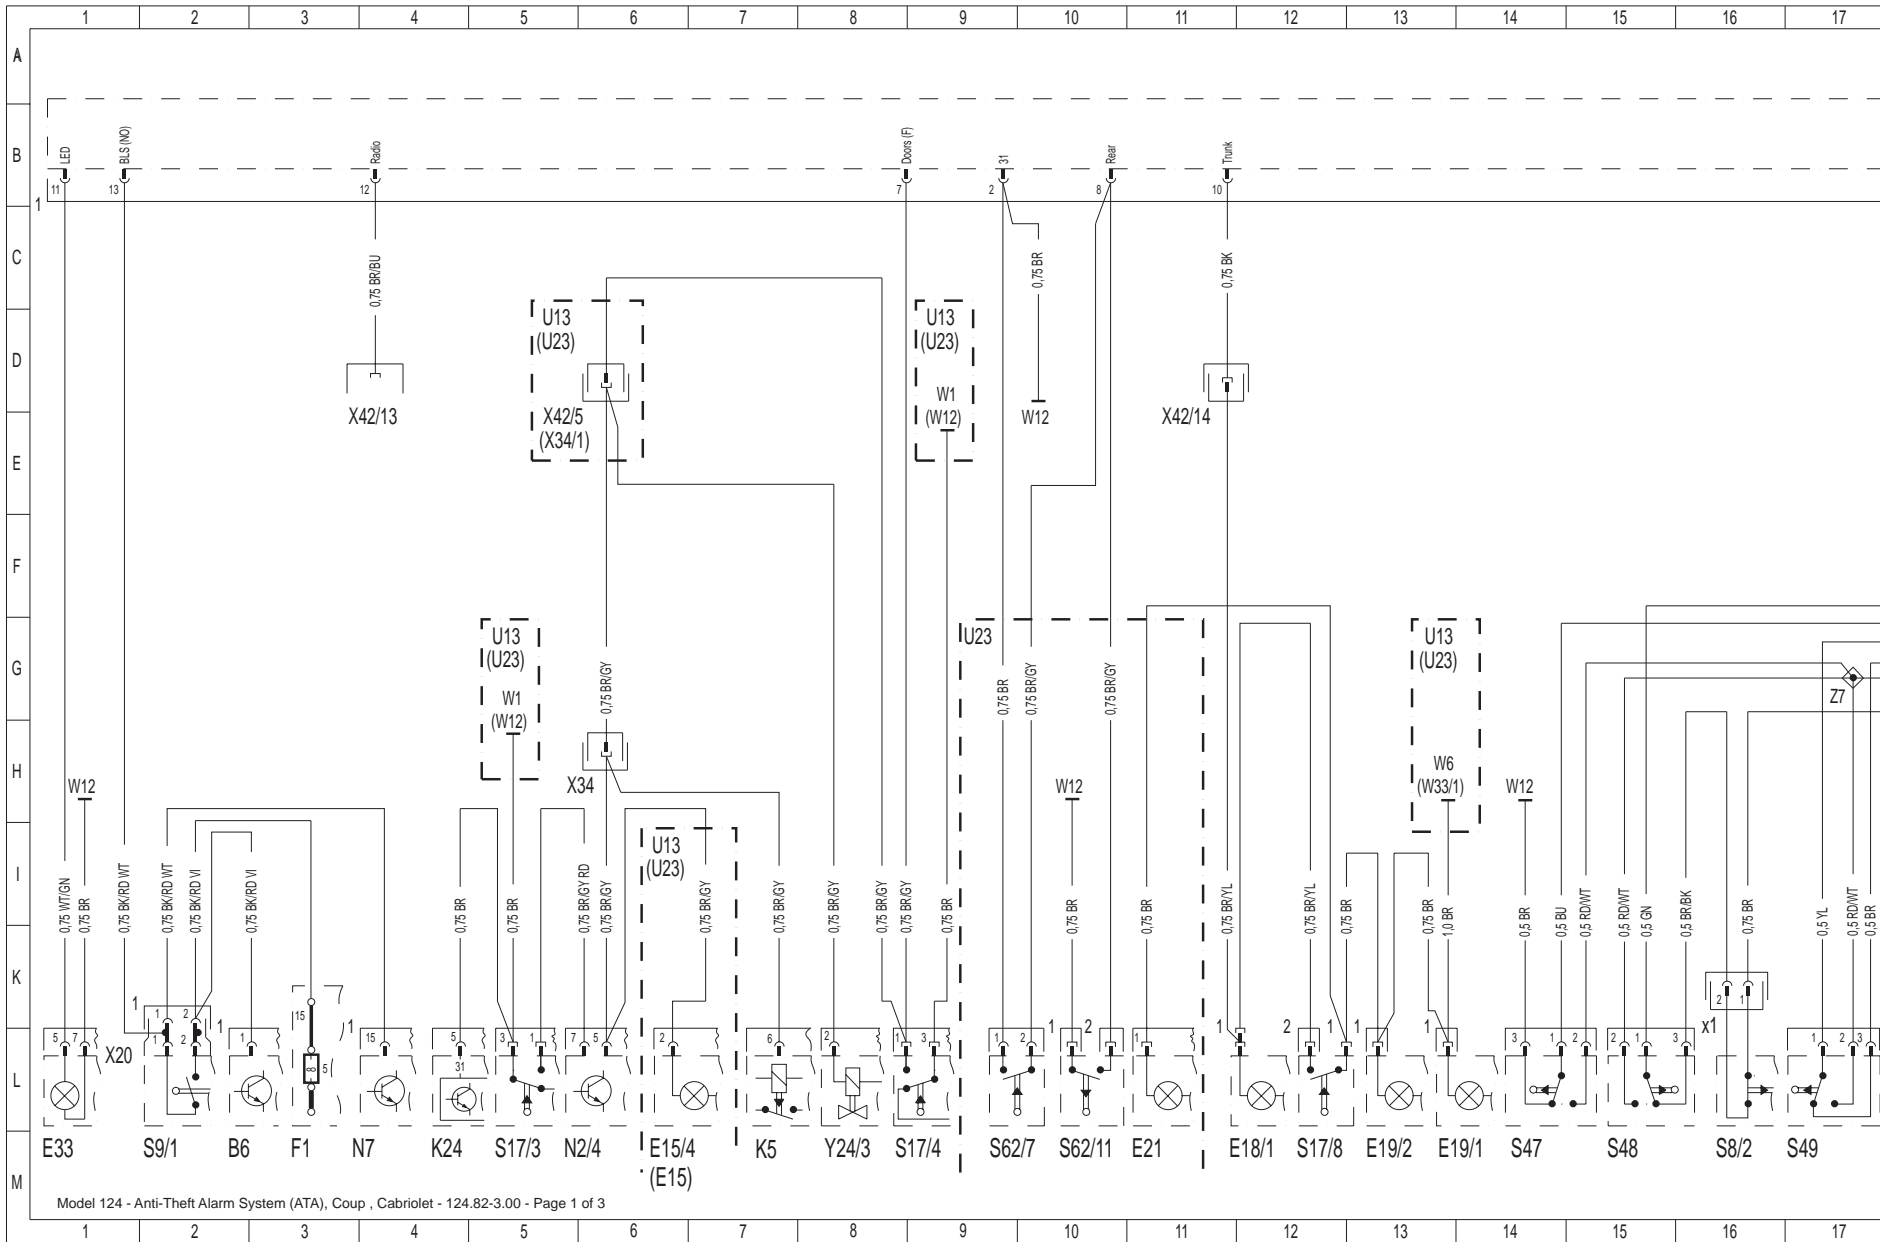

N26

