


E10/3	Right air outlet illumination	1M
E15/3	Rear dome lamp	4M 7M
E18/1	Trunk lamp	4M 6M
F1	Fuse and relay box	
F1-A	Fuse A, terminal 15R/30	16L
F1-C	Fuse C, terminal 30	9L
F1-G	Fuse G, terminal 15R/30	18L
F1-H	Fuse H, terminal 15R/30	18L
F1-1	Fuse 1, terminal 15R	9L
F1-2	Fuse 2, terminal 15R	17L
F1-9	Fuse 9, terminal 30	17L
K24	Convenience relay module	15M
M10/3	Left front power window motor	20M
M10/3x1	Left front power window motor connector	20K
M10/4	Right front power window motor	19M
M10/4x1	Right front power window motor connector	19K
M10/5	Left rear power window motor	35M
M10/5x1	Left rear power window motor connector	35K
M10/6	Right rear power window motor	34M
M10/6x1	Right rear power window motor connector	34K
M11	Automatic antenna (radio/telephone) (USA)	8M
M12	Sliding/pop-up roof drive assembly	13M
N2/4	Seat belt/keys/lights warning module (USA)	12M
N26	Anti-theft alarm control module	2M
N42	Left seat belt extender control module	5M

N57	Convenience control module (power windows, sliding/pop-up roof)	18A
S13/2	Sliding/pop-up roof switch	11M
S17/3	Left front door switch	12M
S17/3	Left door switch	12M
S17/4	Right front door switch	2M
S17/4	Right door switch	2M
S21/1	Left front power window switch (front center console)	23M
S21/2	Right front power window switch (front center console)	21M
S21/3	Left rear power window switch	28M
S21/4	Right rear power window switch	33M
S21/5	Left rear power window switch (front center console)	30M
S21/6	Right rear power window switch (front center console)	25M
S21/7	Rear power windows safety switch (center console)	29M
U13	Valid for Coupé	
U21	Valid for sedan	
W1	Main ground (behind instrument cluster)	
W12	Ground (center console)	
	Grounds not indicated, components are connected on engine block or bodywork	
X4/1	Terminal block (terminal 30, interior)	14H
X6/1	Terminal block (terminal 58D) (1-or 2-pole)	22H
X30	Accessory equipment connector block	10M
X42/7	Right front door contact switch connector (ATA)	3H
X44/3	Convenience feature connector (2-pole)	14H
Y24/3	Seat backrest locking valve	3M

<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be Shown framed.</p>
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>

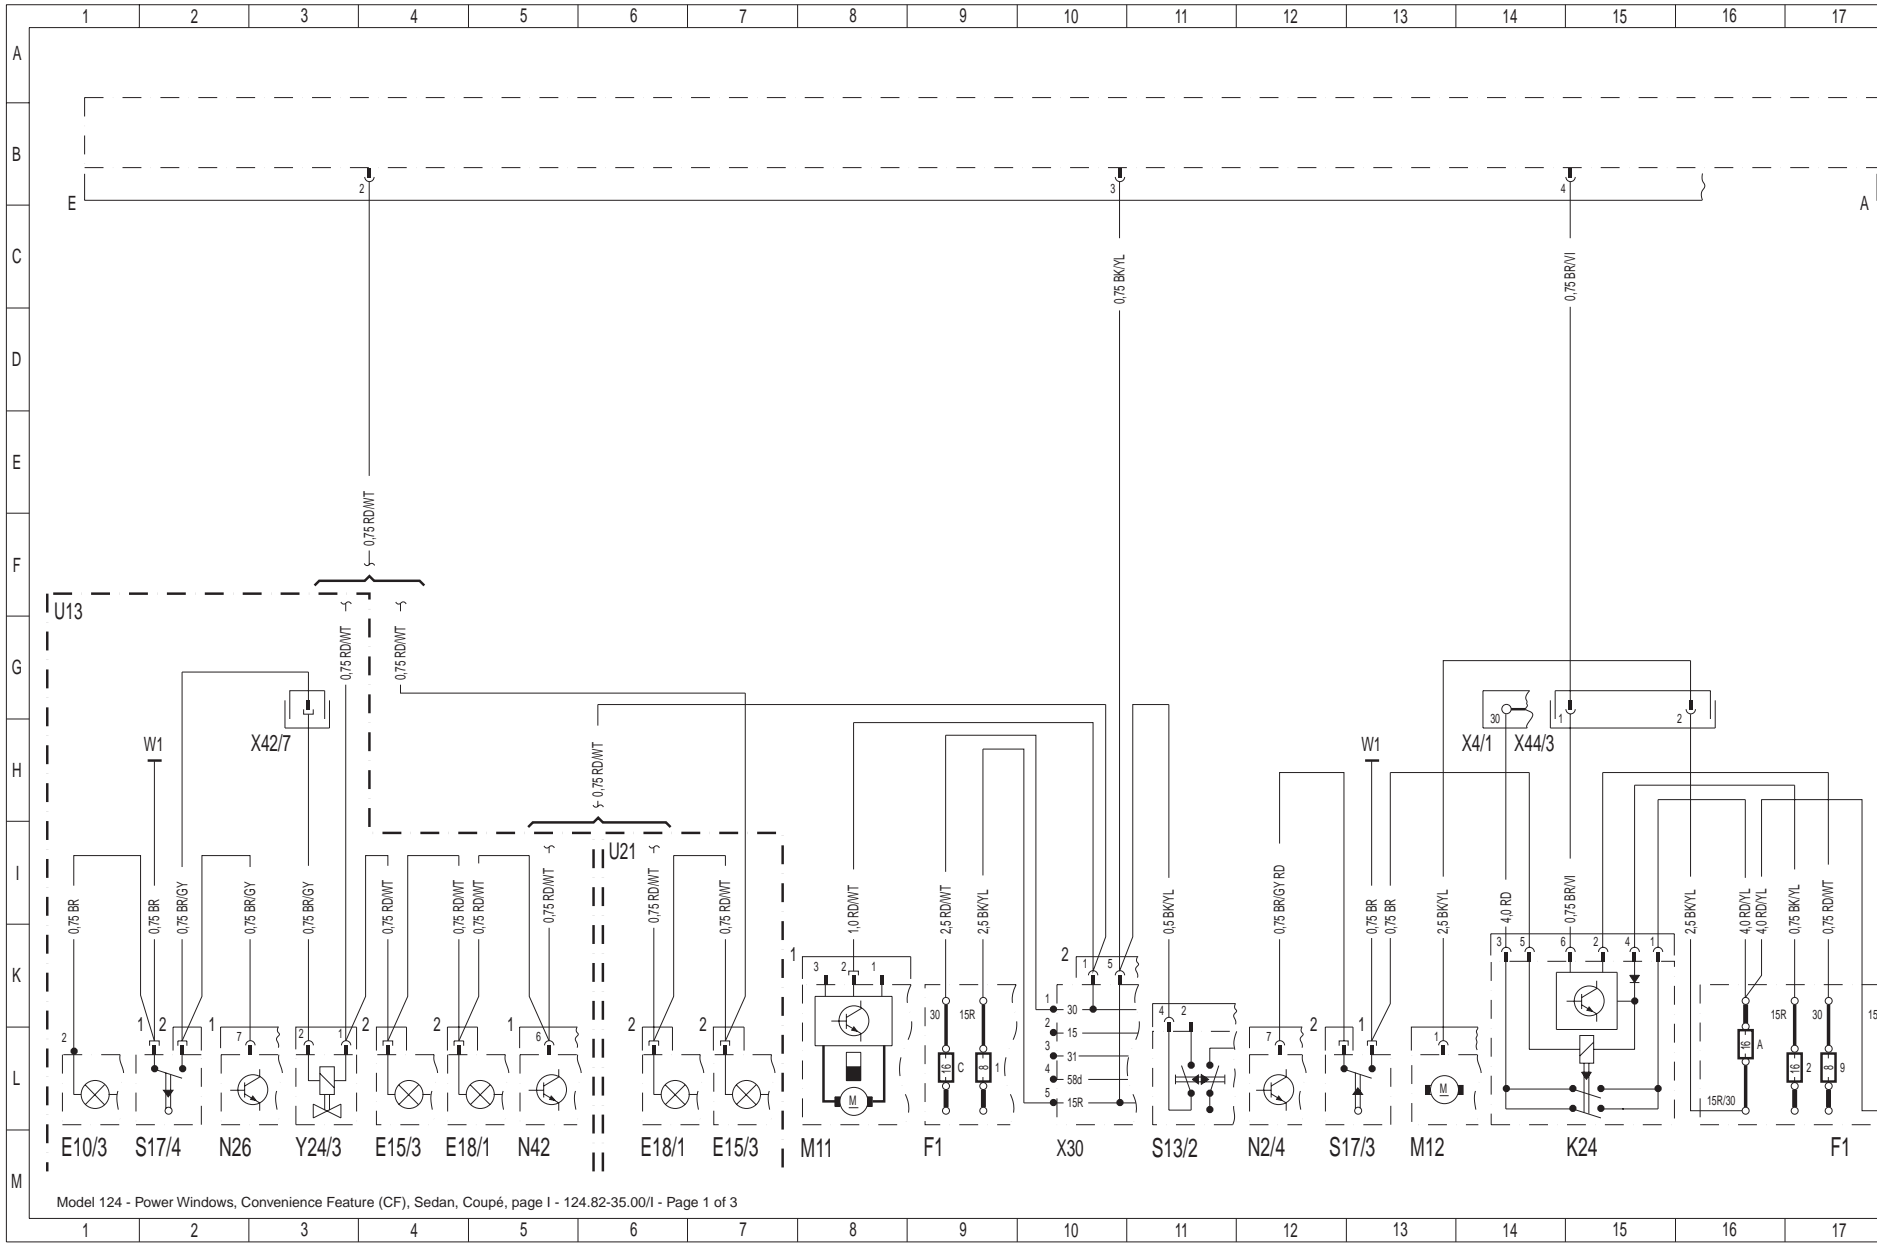

N57

