

A12	Tailgate closing assist	12M	M14/1	Supply pump (CL)	20M	S62/1	Left front door switch (ATA)	23M
A12s1	Tailgate closing assist switch	11M	M14/1x1	Supply pump voltage supply connector (CL)	20K	S62/1x1	Left front door switch connector (ATA)	23K
A12s2	Tailgate lock switch	11M	M14/2x2	Supply pump control line connector (CL/OSB)	21K	S62/2	Right front door switch (ATA)	24M
A12x1	Tailgate closing assist connector	12K	M14/2	Supply pump (CL/OSB)	20M	S62/2x1	Right front door switch connector (ATA)	24K
A12x2	Tailgate microswitch connector	10K	M14/2x1	Supply pump voltage supply connector (CL/OSB)	20K	S62/3	Trunk lid switch (ATA/CF)	26M
B6	Hall-effect speed sensor	3M	M14/2x2	Supply pump control line connector (CL/OSB)	21K	S62/3x1	Trunk lid switch connector (ATA)	25K
E10/3	Right air outlet illumination	8M	N2/4	Seat belt warning module (USA)	5M	U37	Valid for orthopedic seat backrest	
E17/3	Left front door entrance/exit lamp	7M	N3/4	Engine control module (HFM-SFI)	31M	W1	Main ground (behind instrument cluster)	
E17/4	Right front door entrance/exit lamp	6M	N4/3	CC/ISC control module	31M	W6	Ground (left wheelhousing in trunk)	
E17/5	Left rear door entrance/exit lamp	13M	N7	Exterior lamp failure monitoring module	3M	W8	Ground (tailgate terminal block)	
E33	ATA status indicator	1M	N26	ATA control module	20A	W10	Ground (battery)	
F1	Fuse and relay box		N57	CF control module (power windows, sliding/pop-up roof)	22M	W12	Ground (center console)	
F1-B	Fuse B, circuit 15	35L 37E	S2/1	Ignition/starter switch	32M		Ground location without designation, component grounded directly on engine, chassis or body.	
F1-C	Fuse C, circuit 30	17L 37E	S8/2	Warning buzzer contact (exterior lamps/CL)	14M	X4/1	Terminal block (circuit 30, interior)	33H
F1-1	Fuse 1, circuit 15R	17L	S8/2x1	Warning buzzer contact connector (exterior lamps/CL)	14K	X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	33F
F1-3	Fuse 3, circuit 58R	27L	S9/1	Stop lamp switch (4-pole)	2M	X8	Terminal block (tailgate)	12H
F1-5	Fuse 5, circuit 15	3E 36L	S16/1	Starter lock-out/backup lamp switch	29M	X20	Stop lamp switch intermediate connector (2-pole)	2L
F1-8	Fuse 8, circuit 58L	27L	S17/3	Left front door switch	5M	X26	Interior/engine connector (12-pole)	31F
F1-11	Fuse 11, circuit 15T	28L	S17/4	Right front door switch	7M	X27	Starter harness connector	30H
F1-12	Fuse 12, circuit 15X	28L	S17/5	Left rear door switch	8M	X30	Accessory equipment connector block	18M 37M
F1-14	Fuse 14, circuit 56b	28L	S17/6	Right rear door switch	9M	X34	Right front door contact switch intermediate connector	5H
H3	Alarm horn	39M	S18/1	Rear dome lamp switch (with illumination)	10M	X42	ATA connector (front/rear)	27D
K24	CF relay module	4M	S47	Left front door actuator	15M	X42/6	Left front door contact switch connector (ATA)	9F
K38	Starter lock-out relay module	34M	S48	Right front door actuator	14M	X42/7	Right front door contact switch connector (ATA)	5F
M1	Starter	30M	S49	Trunk lid lock actuator	16M	X42/11	Tailgate harness connector (3-pole)	25H
			S62	Engine hood switch (ATA)	38M			

X42/13	ATA contact connector (radio) (1-pole)	3F
X43	ATA connector (CL system) (3-pole)	21H
X44/1	CL system connector (trunk lock)	16H
X49/2	Backup lamp/starter lock-out switch connector	29H
X81/4	Engine/chassis harness connector (EA/CC)	31H
Z24/1	Connector sleeve (ATA arm)	23F
Z24/2	Connector sleeve (ATA disarm)	24F
<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>		
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>		





