

A1	Instrument cluster	1M 10M	K10	Auxiliary fan relay module (stage 2)	24M	X4/1	Terminal block (circuit 30, interior)	29H
A1p4	Outside temperature indicator	1M	K17	AIR relay module	22M	X4/10	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	15I 24I 28F 38F
A1r1	Instrument illumination rheostat	11M	M2	Blower motor	26M	X11/4	Data link connector (DTC readout)	4H 39F
A2	Radio	12M	M4	Auxiliary fan	18M	X26	Interior/engine connector (12-pole)	20I 24H 36H
A2/4	Radio control module	12M	M4m1	Left auxiliary fan	18M	X26/2	Engine separation point connector	5H
A9	A/C compressor	37M	M4m2	Right auxiliary fan	19M	X35/7	Cockpit/module box separation point (12-pole)	4F
A9k1	Electromagnetic clutch	38M	M4m1x1	Left auxiliary fan connector	17K	X53/5	Hall-effect sensor multipoint connector (VSS)	1H
A9I1	RPM sensor	37M	M4m2x2	Right auxiliary fan connector	19K	X64	Blower regulator/interior harness connector	25H
A9x1	A/C compressor connector	37L	M9	In-car temperature sensor aspirator blower	30M	X64/4	Dual auxiliary fan connector (2-pole)	17I
B10/1	Heater core temperature sensor	3M	M13	Coolant circulation pump	31M	Y7	Switchover valve block (7 connections)	34M
B10/4	In-car temperature sensor	2M	N16/1	Base module (BM)	21M 38A	Y7y1	Fresh/recirculated air flap (short stroke)	35M
B10/5	Outside temperature sensor	6M	N22	A/C pushbutton control module (Automatic A/C)	18A	Y7y2	Fresh/recirculated air flap (long stroke)	35M
B10/5x1	Outside temperature sensor connector	6K	N29	Electronic blower regulator	26M	Y7y3	Legroom flaps	34M
B10/6	Evaporator temperature sensor	2M	R15	Auxiliary fan preresistor	17M	Y7y4	Center outlet flaps	34M
B10/6x1	Evaporator temperature sensor connector	2K	S2/1	Ignition/starter switch	28M	Y7y5	Defroster outlet flaps (long stroke)	33M
B10/8	ECT sensor (A/C)	5M	S14	Rear window defroster switch	10M	Y7y6	Diverter flap	33M
F1	Fuse and relay box		S24	Fresh/recirculated air switch	7M	Y7y7	Defroster outlet flaps (short stroke)	32M
F1-7	Fuse 7, circuit 15	15L 20L 32L	S26/1	Heated windshield washer system thermostwitch	20M	Y19	Automatic A/C monovalve	29M
F15	Auxiliary fuse holder (A/C blower motor)	27M	S31/1	Dual function A/C compressor pressure switch (OFF 2.0/30.0 bar, ON 2.6/22.0 bar)	36M	Z81	Circuit 58d connector sleeve	10H
F22	Auxiliary fuse holder (auto. A/C, circuit 30)	15M	S32/1	A/C compressor pressure switch (OFF 12.0 bar/ON 16.0 bar)	16M		Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
K9	Auxiliary fan relay module (stage 1 and 2)	13M	W1	Main ground (behind instrument cluster)				
K9k1	Auxiliary fan relay (stage 1)	13M	W14	Ground (ABS hydraulic unit bracket)				
K9k2	Auxiliary fan relay (stage 2)	13M	W27	Ground (module box bracket)				
K9/1	Auxiliary fan relay module (stage 1)	23M		Ground location without designation, component grounded directly on engine, chassis or body.				

124.83-6.00	Automatic Air Conditioning, Engine 119 with LH-SFI	As of MY 1993	Page 2 of 2
-------------	--	---------------	-------------

Explanations and Notes of Wiring Diagram see
Section 00-A
Locations/Connections/Overview see Section 00-B/00-C

N22



