

F1	Fuse and relay box	
F1-B	Fuse B, terminal 15	7L
F1-1	Fuse 1, terminal 15R	7L
M21/1	Electrically adjustable and heated driver-side outside rearview mirror	1M
M21/1m1	Vertical adjustment motor (up/down)	1L
M21/1m2	Horizontal adjustment motor (in/out)	2L
M21/1r1	Mirror heater	3L
M21/2	Electrically adjustable and heated front passenger outside rearview mirror	4M
M21/2m1	Vertical adjustment motor (up/down)	4L
M21/2m2	Horizontal adjustment motor (in/out)	5L
M21/2r1	Mirror heater	6L
M24	Rear window sun shade motor	12M
M24x1	Rear window sun shade motor connector	12K
S50	Outside mirror control switch	4A
S50s1	Vertical mirror adjustment (up/down)	1A
S50s2	Horizontal mirror adjustment (in/out)	3A
S50s3	Left/right mirror selection	2A
S79	Rear window sun shade switch (center console)	13M
U46	Valid for rear window sun shade	
W1	Main ground (behind instrument cluster)	
X6	Terminal block (terminal 58d) (2-pole)	8I
X30	Accessory equipment connector block	9M
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		

<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>
--

