


A1	Instrument cluster	28M	M11	Automatic antenna (radio/telephone) (USA)	15M	X34	Right front door contact switch intermediate connector	20H
A1r1	Instrument illumination rheostat	29M	M14/2	Supply pump (CL/OSB)	8M	X34/1	Left front door contact switch intermediate connector	23H
A2/4	Radio control module	27M	M21/1	Electrically adjustable and heated driver-side outside rearview mirror	14M	Y24/3	Seat backrest locking valve	18M
A10	Left SBE	5M	M21/1r1	Mirror heater	14K	Z7	Circuit 30 connector sleeve	16I
A10m1	SBE motor	6M	N2/4	Seat belt warning module (USA)	26A	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.		
A10s1	Extender arm "retracted" switch	6M	N7	Exterior lamp failure monitoring module	29M			
A10s2	Extender arm "extended" switch	4M	N42	SBE control module	11A	Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		
A10s3	Force limit switch	5M	R3	Front cigar lighter (with ashtray illumination)	26M			
A10x1	Left seat belt extender connector	4I	R3e1	Illumination	27M			
A11	Right SBE	2M	R3x1	Illuminated cigar lighter connector	26K			
A11m1	SBE motor	3M	S1	Exterior lamp switch	30M			
A11s1	Extender arm "retracted" switch	2M	S8/2	Warning buzzer contact (exterior lamps/CL)	26M			
A11s2	Extender arm "extended" switch	1M	S17/3	Left door switch	23M			
A11s3	Force limit switch	2M	S17/4	Right door switch	21M			
E15	Dome lamp (with shut-off delay and reading lamp)	24M	S50	Outside/inside mirror control switch	12M			
E17/3	Left front door entrance/exit lamp	16M	S50s2	Horizontal mirror adjustment (in/out)	12M			
E17/4	Right front door entrance/exit lamp	20M	S68/1	Left front seat belt buckle switch (SBE/reminder)	7M			
E18/1	Trunk lamp	17M	S68/1x1	Left front seat belt buckle switch connector (SBE/reminder)	7I			
E31	Center console seat belt reminder lamp	23A	S68/2	Right front seat belt buckle switch (SBE)	22M			
F1	Fuse and relay box		S68/2x1	Right front seat belt buckle switch connector (SBE)	22K			
F1-B	Fuse B, circuit 15	9L	W1	Main ground (behind instrument cluster)				
F1-C	Fuse C, circuit 30	9L	W12	Ground (center console)				
F1-1	Fuse 1, circuit 15R	10L		Ground location without designation, component grounded directly on engine, chassis or body.				
F1-3	Fuse 3, circuit 58R	32L	X28/6	Seat belt warning module/relay module connector	24F			
F1-5	Fuse 5, circuit 15	25L	X30	Accessory equipment connector block	11M			
F1-9	Fuse 9, circuit 30	25L						
K5	ESA module (USA)	19M						
K18/1	Seat belt warning relay module	13M						

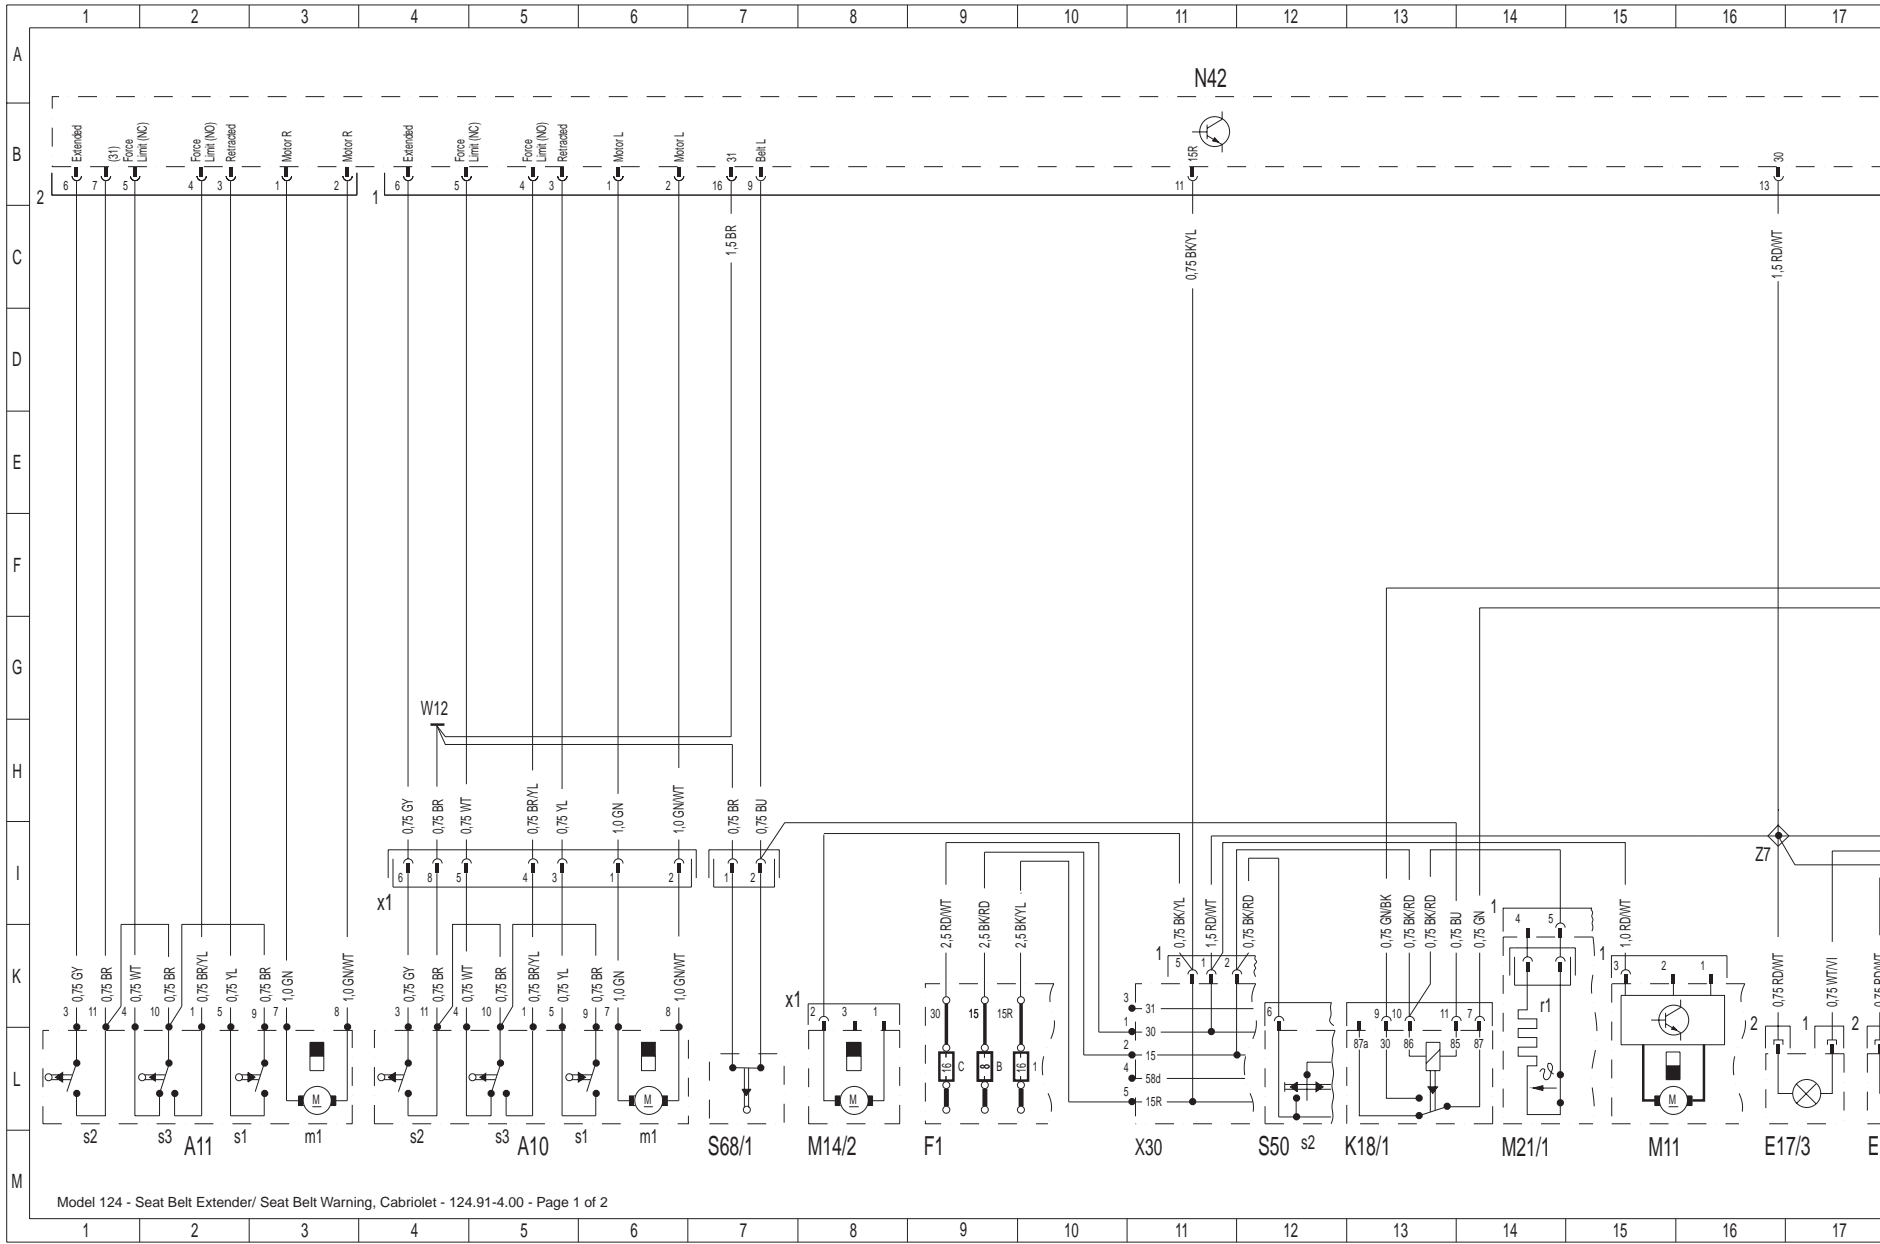

Model 124 - Seat Belt Extender/ Seat Belt Warning, Cabriolet - 124.91-4.00 - Page 1 of 2

