


01-0500 Removing and installing cylinder head cover

Preceding work:
Warning instructions when hood open (01-0085).

Operation no. of operation texts and work units or standard texts
and flat rates
01-5070

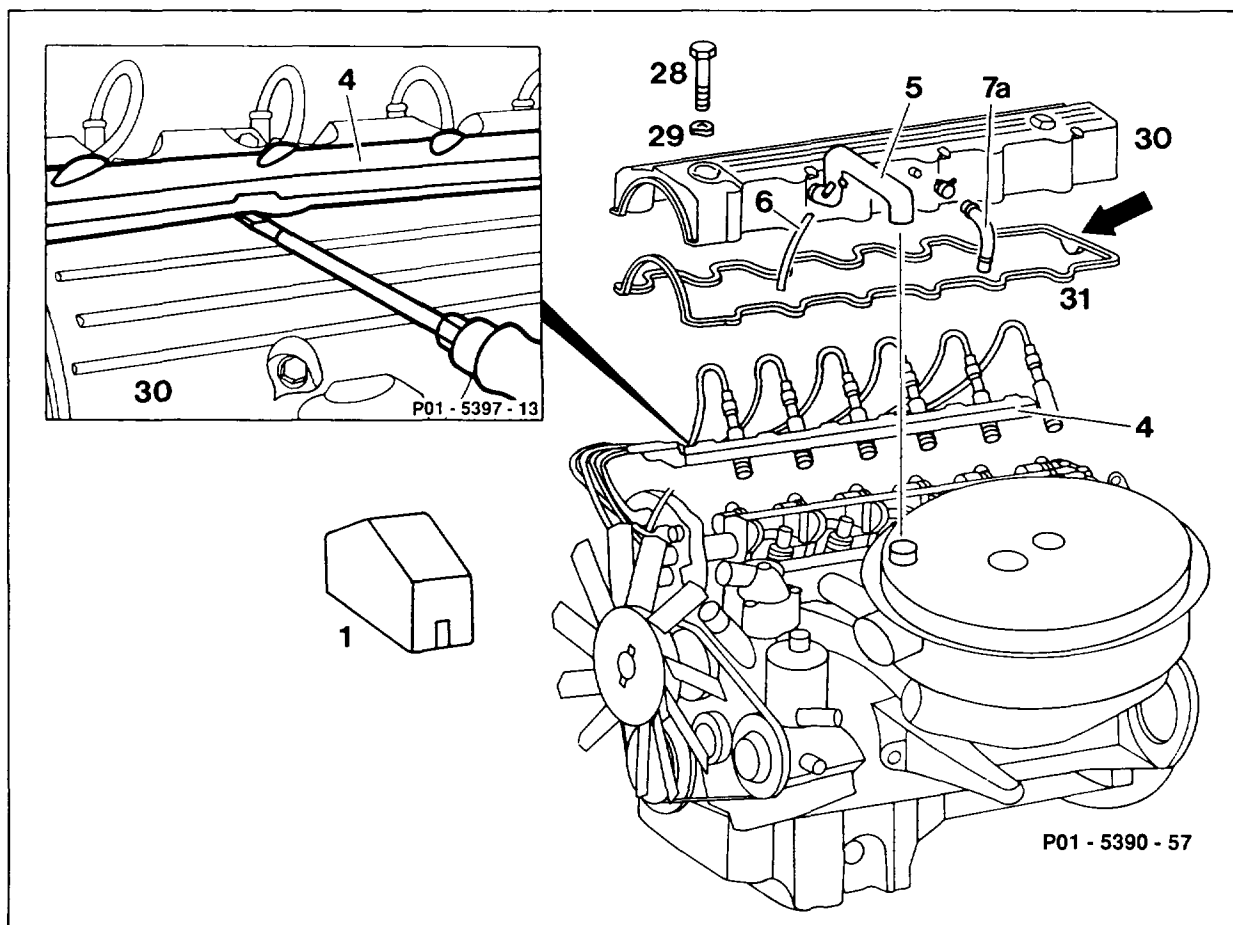

Cover (1) above high-voltage distributor	unclip, remove, install.
All spark plug connectors	unplug, plug in.
Shaft (4) with spark plug cable	unclip from cylinder head cover (30) with a screwdriver, place to the side, install.
Air admission or vent hose (5) with vacuum hose (6)	detach from air cleaner, fit on.
Vent hose (7a)	detach from cylinder head cover (30), fit on.

M8 x 75 screws (28) with washers (29) unscrew, screw on (9 Nm).
 Cylinder head cover (30) with gasket (31) take off, fit on.



If cylinder head cover (30) is tight, do not strike it with a hammer; risk of cracking and fracturing.


Gasket (31) replace according to condition.
 Engine run, check for leaks particularly at rear (arrow).

Tightening torque in Nm

Screws of cylinder head cover

9

Special tool

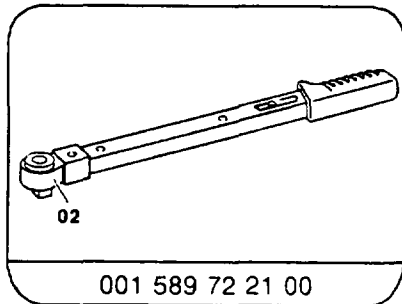

Note

The cylinder head gasket made of more heat-resistant material, installed as standard from November 1991 up to February 1992 and as of September 1992, should be installed when performing repairs.