
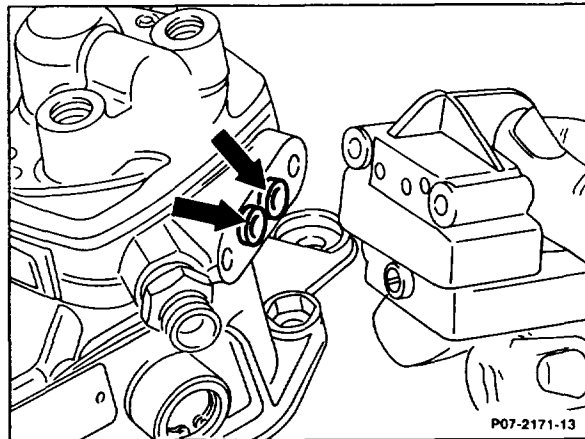


07.3-1692 Replacing electrohydraulic actuator

Operation no. of operation texts and work units or standard texts and flat rates:
07-1692.

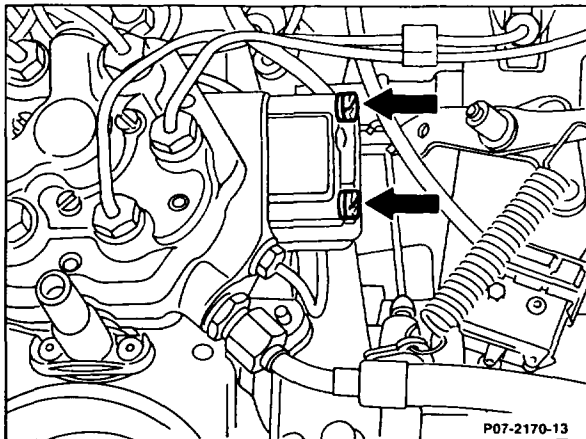

Electrical coupling	disconnect, connect
Fuel pressure	release by detaching fuel line between fuel distributor and start valve. Collect fuel flowing out with a rag.
Securing screws (arrows)	unscrew, screw in. Replace O-rings (arrows). Check that sealing surface is clean, if necessary clean surfaces with white spirit and a non-fluffing cloth. Tighten securing screws to 3.0 + 0.5 Nm.
Leaktightness of O-rings	check. With engine running, no fuel must flow out.
Idle speed	adjust (07.3-2053).

Commercially available tools and testers (see Workshop Equipment Manual)

Designation	e.g. Make, order no.
Screw driver 2115-T27	Hazet, D-5630 Remscheid