


15-0512 Replacing ignition cables with M3 cable screw

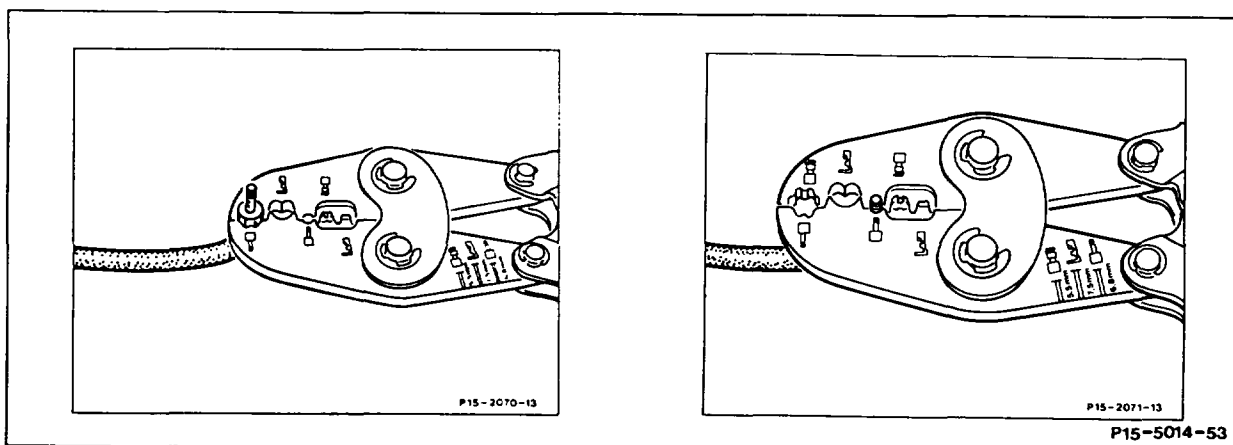

Note

Ignition cables are available in the parts market only by the meter. For this reason, before installing the ignition cables, attach the connection parts with electricians' pliers.

Ignition cables	cut to length.
Ends of ignition cables	strip insulation over 6 mm.
Sleeve of cable screw	fit on and attach with electrician's pliers first to the insulation then to the ignition cable core.
Markings for individual cylinders on ignition cables	fit on.
Spark plug connectors	screw on.

Special tool

