



All models

- Remove wheel covers from steel wheels, if so equipped.
- Always tighten wheel bolts with torque wrench.
- Torque in correct sequence (arrows).
- Replace wheel covers on steel wheels.

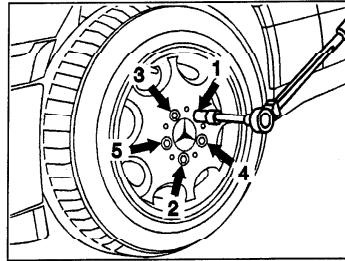

P40-5418-13

 Special tools



Torque specifications (Nm)

Wheel bolts M12 x 1.5 (All models except 140)	110
Wheel bolts M14 x 1.5 (Model 140 only)	150