


All models

- Unscrew vent cap (47), wing nut or knurled nut from reservoir and remove cover (45)

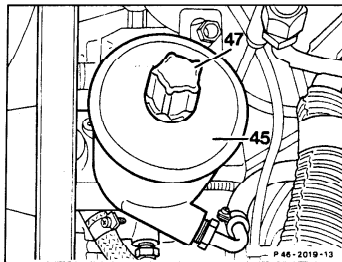

45 Cover
47 Vent cap


Cold fluid level (room temperature 20°C) between minimum and maximum marks on plastic sleeve (30c).

- Add fluid, if necessary.

CAUTION!


Do not overfill reservoir.

- Install cover, making sure that gasket seats properly. Screw on vent cap, wing nut, or knurled nut.

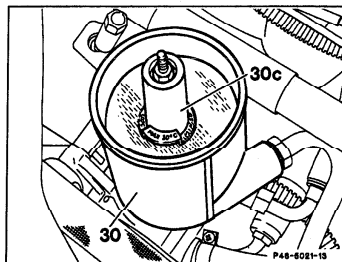

Engine 120

- Remove cover between cylinder head covers.
- Remove filler cap. The integral dipstick shows the correct minimum and maximum markings and the respective temperature ranges.

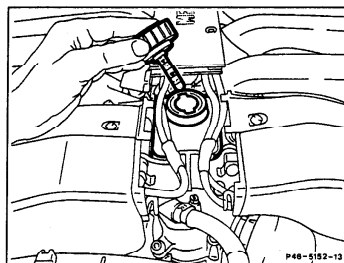

4611

Checking power steering fluid level

Oil grade

MB steering gear oil p/n 000 989 88 03

Refer to MBNA Factory Approved
Service Products list
