


All models

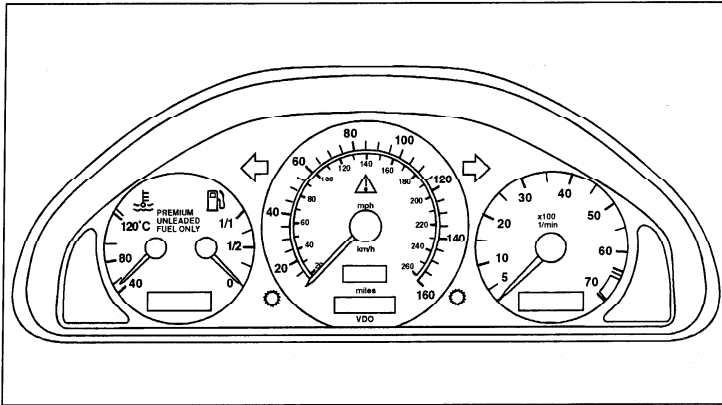

P54-6502-55

- Turn ignition key in position 2.
- Check warning and indicator lamps:

NOTE:

On model 202, the warning lamps go out after approx. 30 seconds with the exception of the ABS, ASD, ASR, SRS and charge lamps. The SRS lamp goes out after approx. 4 seconds.

Turn signal lamp left and right
Headlamp high beam
Parking brake and brake fluid level
Engine oil level indicator
Coolant level indicator
Washer fluid level indicator
Bulb failure warning unit.
Seat belt/backrest lock warning lamp
ASD/ASR function indicator
ASD/ASR warning lamp
Adaptive Damping System (ADS) function indicator
Roll bar indicator lamp (124, 129)
Oil pressure warning lamp (129, 140)
CHECK ENGINE lamp
Fuel reserve
Charge indicator lamp
Brake pad wear indicator
ABS warning lamp
Pre-glow indicator lamp
SRS warning lamp (must go out after approx. 4 seconds at the latest)

- Check turn signals and hazard flashers.
- Check interior and door lamps.