 


All models

### Special tools



- Soak felt parts of cleaning cassette with cleaning solution.
- Insert cleaning cassette and play for about 30 seconds.
- On units with auto reverse, turn cassette over and play for another 30 seconds.