

# Removing and installing lower noise encapsulation panels 9490


Model 124.1 140.1

## Front noise encapsulation panel


### Removal

- Unscrew small bolts (arrows) and remove front noise encapsulation panel.

Model 124.1

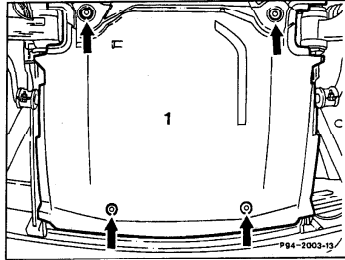


Model 140.1

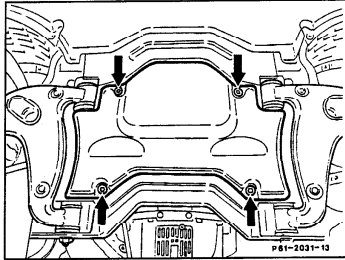


### Installation

- On model 124 engage the slots on the lower noise encapsulation panel (1) with the tabs of the side panels (4).

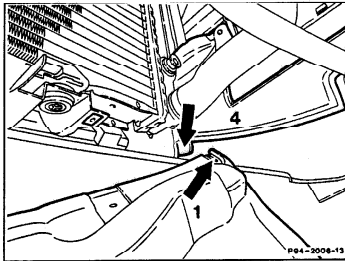


## 9490 Removing and installing lower noise encapsulation panels

- Push lower noise encapsulation panel (1) up; edges of side panels (3) must engage over lower panel (1).
- Bolt lower noise encapsulation panel (1) in place.

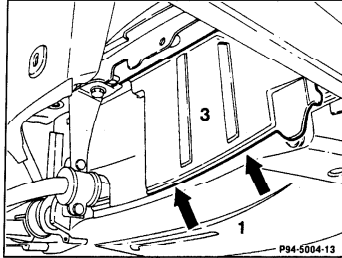

### Center noise encapsulation panel (Model 140.1 only)

- Screw out small bolts (arrows) and remove noise encapsulation panel.
- Installation is the reverse of removal.

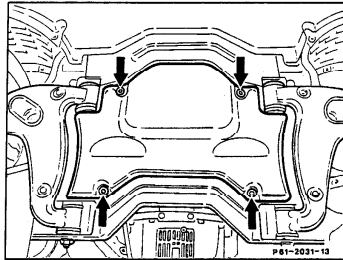


## Removing and installing lower noise encapsulation panels **9490**

### Rear noise encapsulation panel

#### Removal

- Screw out small bolts (arrows) and remove noise encapsulation panel (2) toward rear.

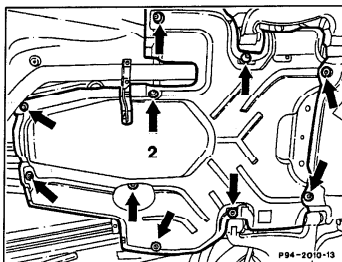

#### Installation

- Insert rear noise encapsulation panel (2) between front axle cross member and front noise encapsulation panel (1).
- Bolt lower noise encapsulation panel (1) in place.