

- Open soft top.
- Using caliper, measure locking tab at worn area and at unworn area.
- If the measured wear difference between the worn and unworn areas is 0.5 mm or greater, replace the locking tab.

