


33-0420 Removing and Installing steering knuckle arm

Preceding work:
Removing and installing front wheel (40-1450)

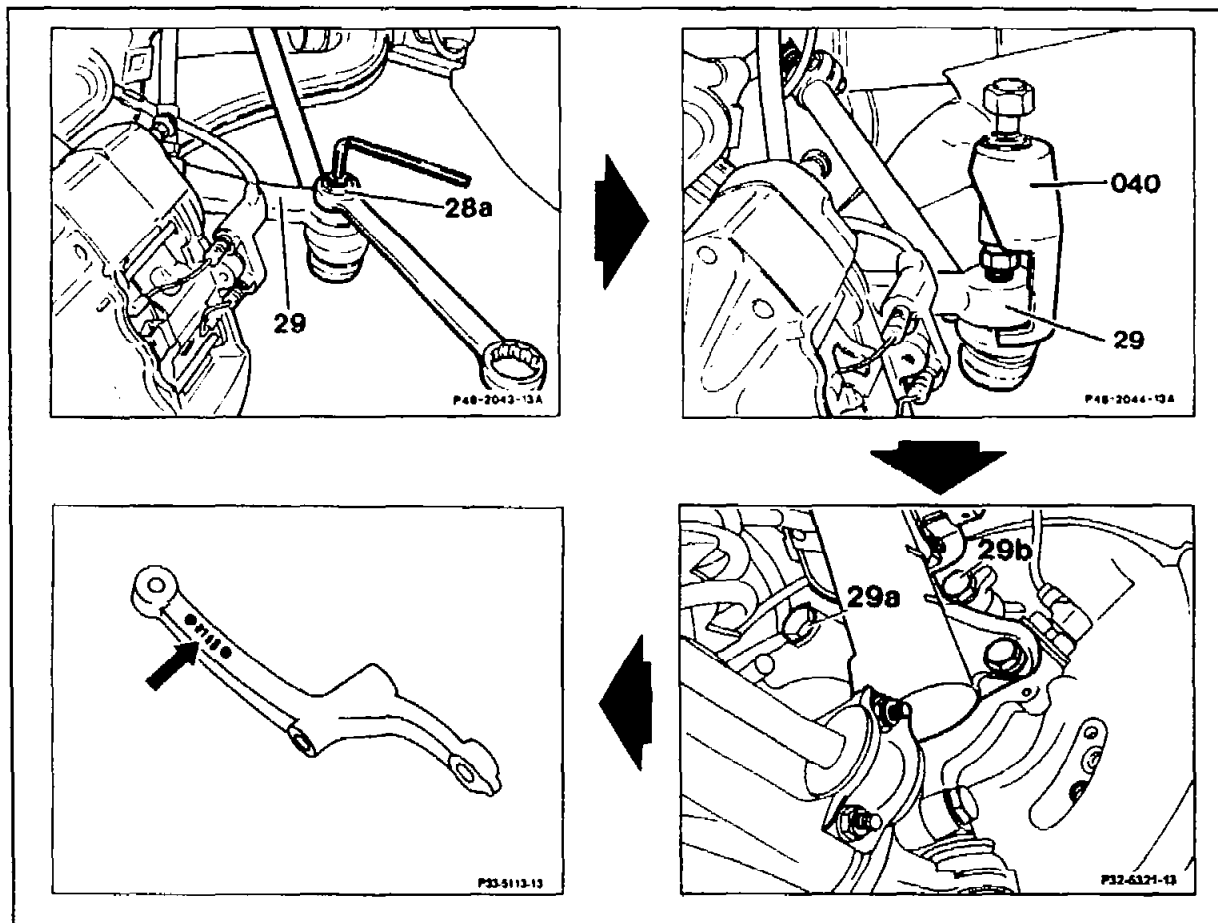

P33-5112-57

Nut (28a) on steering knuckle arm (29)	Unscrew, screw on. Counter the ball pin with an Allen wrench. Replace nut (28a).
	Models 124 and 201: 35 Nm
	Models 124.034/036 and 129: 50 Nm
Track rod ball joint	Force out with puller (040). Use thrust piece. Check rubber boot on ball joint of track rod and replace if damaged (46-0540).
	Puller
	Models 124 and 129 124 589 03 33 00
	model 201 201 589 14 33 00
	Thrust piece
	Models 124, 201 201 589 05 63 00
	Models 124.034/036, model 129 129 589 10 63 00

Bolts (29a and 29b)	Unscrew, screw in, replace, 80 Nm. Remove steering knuckle arm (29).
Toe-in on front axle	Check (40-0323).
Steering knuckle arm (29)	Cannot be checked. In case of doubt, particularly after accidents, install a new steering knuckle arm. Note code number (arrow).

Special tools

