


40-0332 Checking and adjusting toe-in at rear axle

Preceding work:
Checking and adjusting vehicle level at front and rear axles
(40-0300).

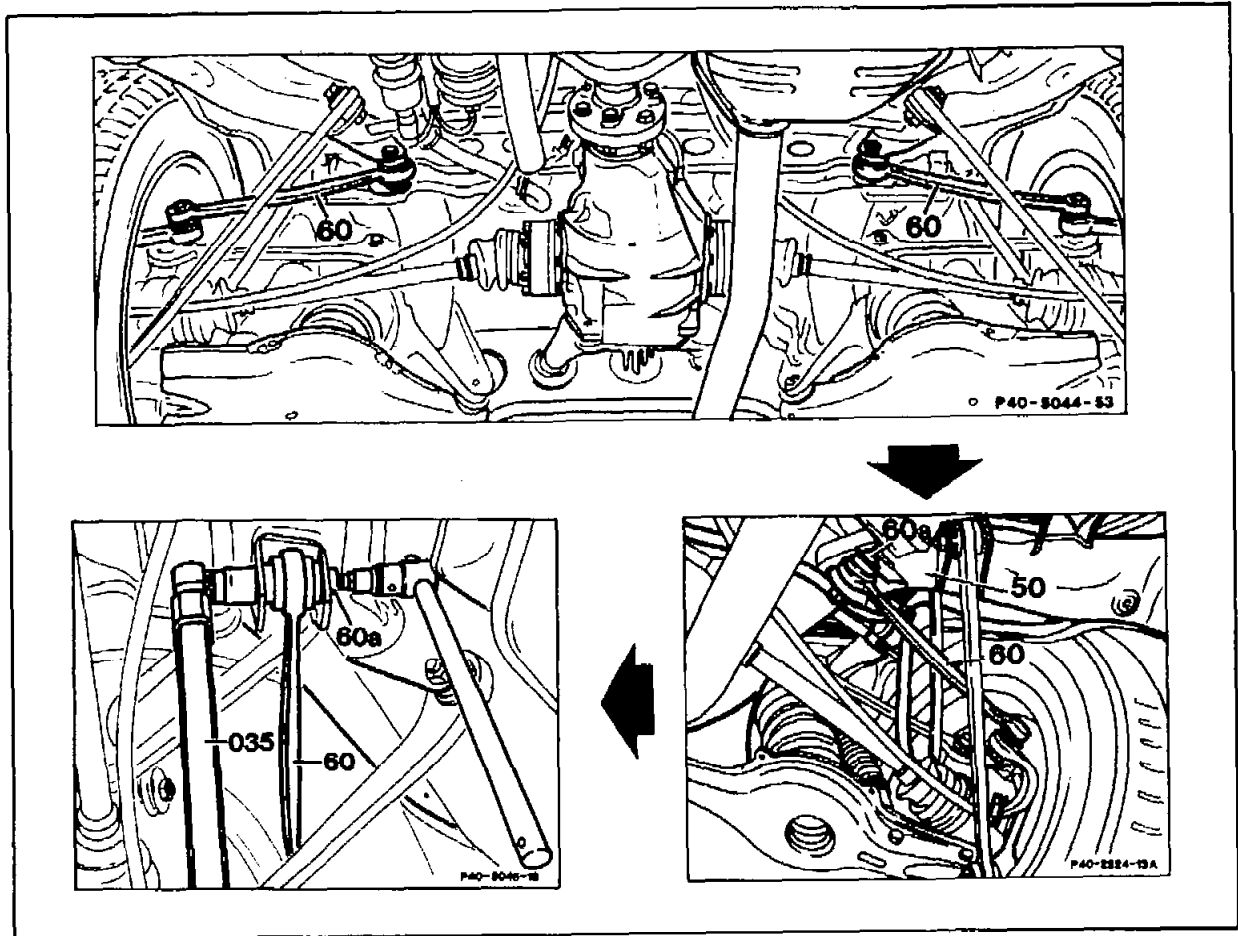

P40-5054-57

Toe-in

Always adjust toe-in starting at maximum possible toe-out to specified toe-in value and distribute evenly between the two wheels. The toe-in can be adjusted with the eccentric bolt (60a) on the mount for the right and left track rod (60) on the rear axle carrier (50). Tightening torque 70 Nm.