
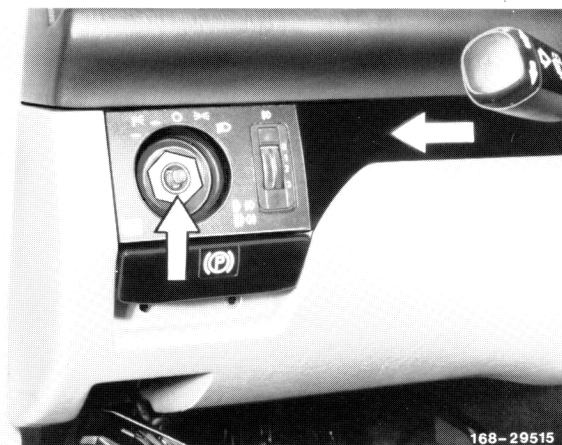



A. Cover at driver's side

Removal

- 1 Remove floor mat.
- 2 Unscrew fastening elements and remove front cover above pedal assembly.
- 3 Disconnect engine hood cable control on opening handle and remove handle.
- 4 Pull off control knob for rotary light switch, unscrew nut (24 mm), slip molding in outward direction, pull off connections for beam range regulator and switch light.
- 5 Remove cover.
- 6 Force molding from ignition lock.

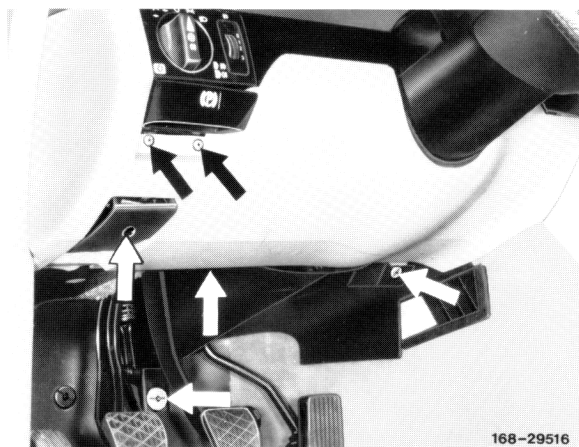

7 Remove screw.

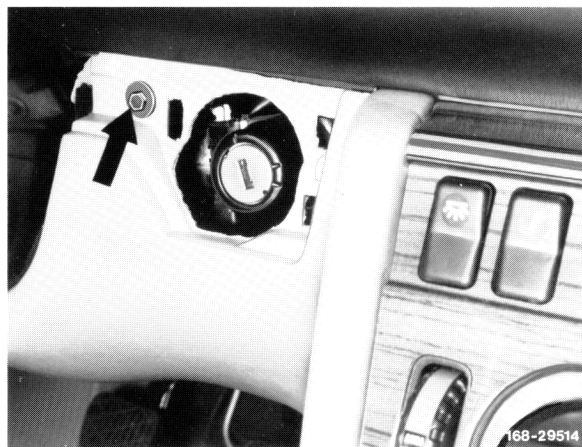


8 Remove screws at left.



9 Disconnect cable control for parking brake at handle and remove handle.

10 Remove cover.

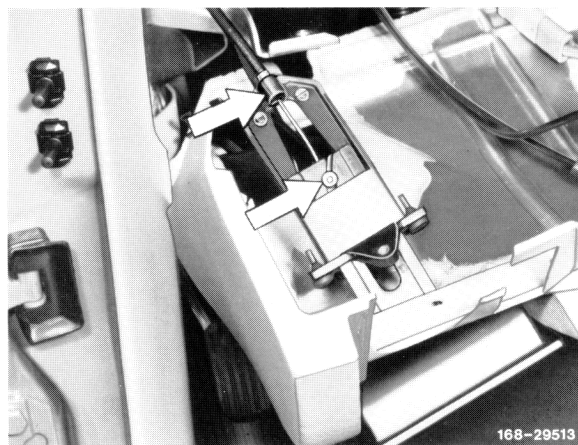

Installation

11 Insert handle for parking brake into cover and engage cable control at handle.

12 Insert cover, making sure that the cover is slipped into the lateral clamp.

13 For further installation proceed vice versa.


Note: Connect vacuum lines on switch for beam range regulator according to color mark on switch.




B. Cover on passenger's side

Removal


1 Remove glove box. For this purpose, unscrew both screws on shackle; push out glove box light and expanding rivets. Push glove box at top center approx. 10 mm down, then pull out.

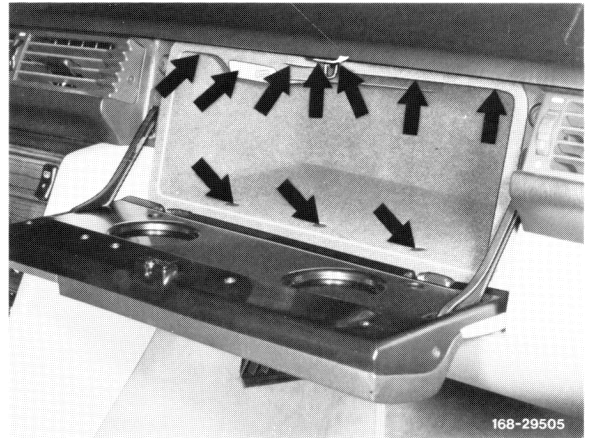

2 Remove screws and take off glove box cover.

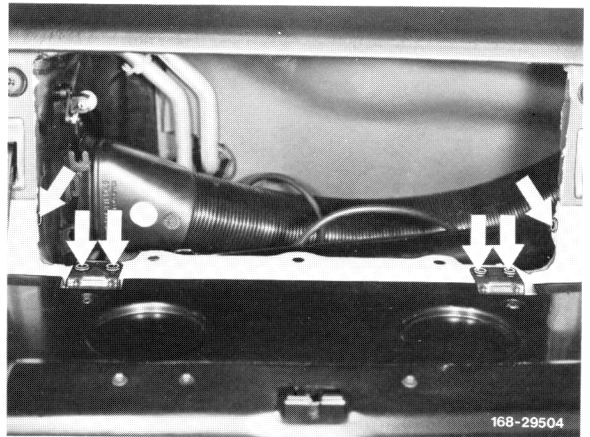


3 Pull out outer air nozzle and remove screws in cutout.

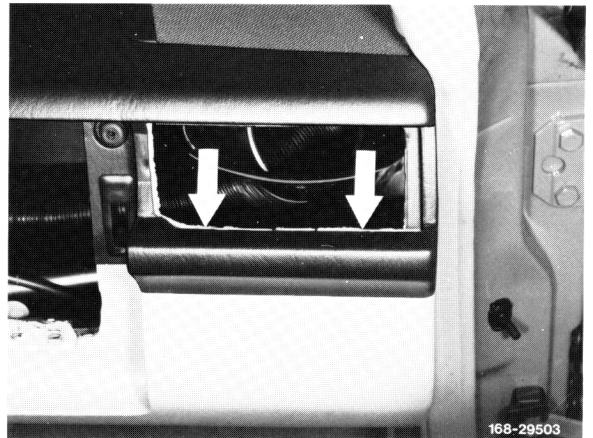

4 Remove screws below.

5 Remove cover toward the rear.

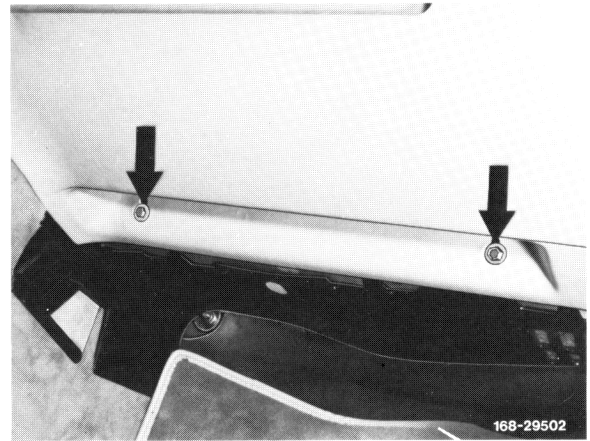

Installation

6 Insert cover, making sure that the cover is slipped into lateral clamp.

7 For further installation proceed vice versa.

