


Removal, installation


- 1 Remove rear cushion and rear seat backrest (91-170).
- 2 Remove trim on rear pillar left and right, do not unscrew belt guide fitting for this purpose (68-449).
- 3 Push out covers on headrest brackets.

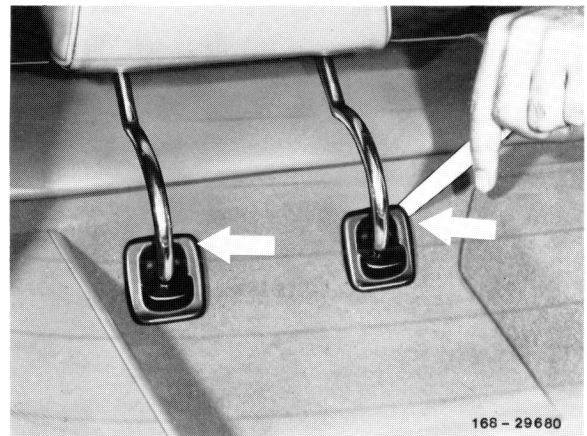

- 4 Push locking lever of lefthand headrest bracket bearing forward by means of a screwdriver, while simultaneously disengaging the headrest bracket by means of light blows with ball of thumb toward the rear.

- 5 Push locking lever on righthand bearing forward and disengage similar to headrest bracket described above.

- 1 Screwdriver
- 2 Locking lever
- 3 Headrest bracket

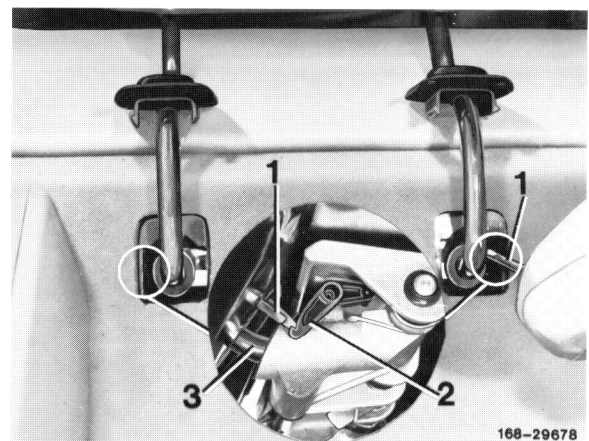

6 Knock out headrest uniformly toward the rear out of bearings, by means of light blows with ball of thumb and remove.



7 Remove first aid kit, disengage rubber bands and unscrew both holders.

8 Lift hat rack above holding link for rear seat backrest and pull out in forward direction.

9 For further installation proceed vice versa.

Note: When installing headrest, slip both headrest brackets uniformly into bearings until lock of headrest bracket engages.

