


## 72-191 Removal and installation of crank window on rear door

---


### Removal, installation

---


- 1 Remove door lining (72-101).
- 2 Pull off plastic foil.
- 3 Remove safety bracket on window lifting rail.

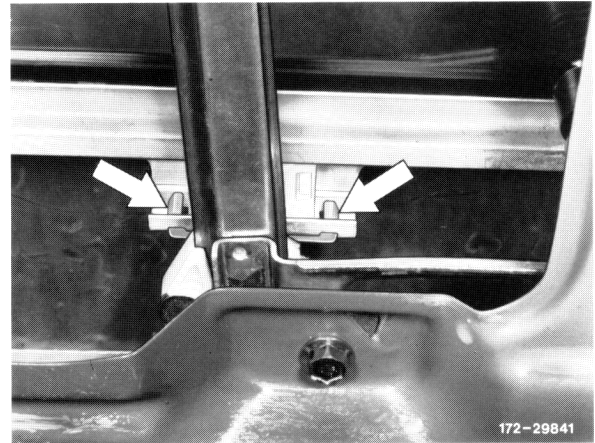

- 4 Extend guide member from window lifting rail.
- 5 Lower window completely down.
- 6 Remove sealing strip inside (72-160).
- 7 Remove flexible window running rail (72-198).

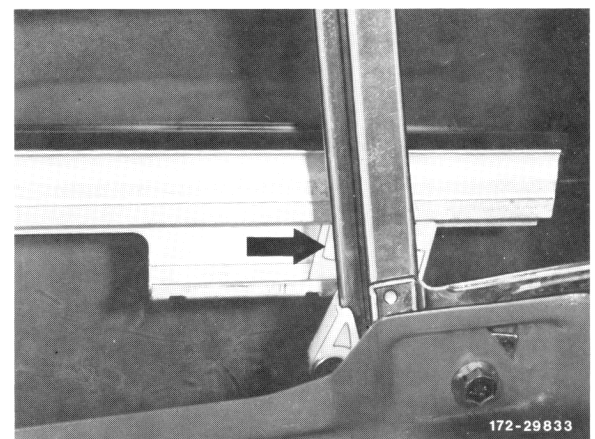

- 8 Remove screw from window web below.

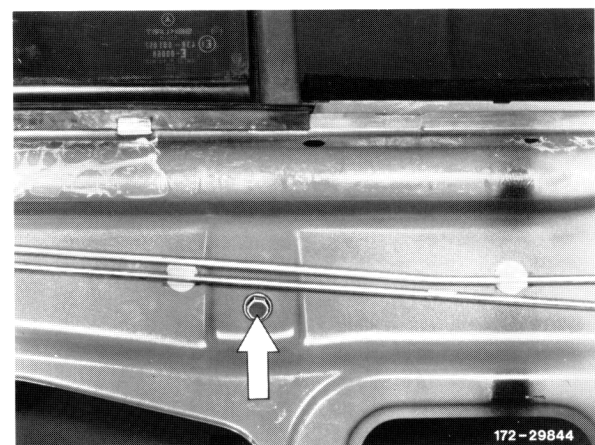

9 Remove screw on window web at top and pull out window web in downward direction.

10 Turn window in door around and lift out of window shaft in upward direction.

11 For installation proceed vice versa.

