



A. Control cable can be removed

Removal, installation

- 1 Remove sun roof headlining.
- 2 Unscrew guide plate on sliding carrier and disengage.
- 3 Let control cable run out of sun roof motor gear unit in forward direction.
- 4 Remove cover in trunk, left.
- 5 Pull off electric connection on sun roof motor and unscrew fastening screws.

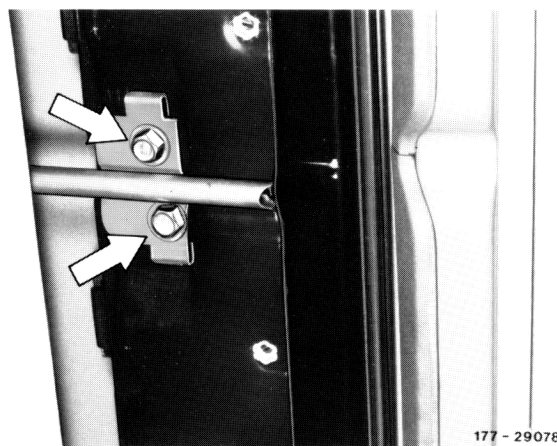


177 - 29078

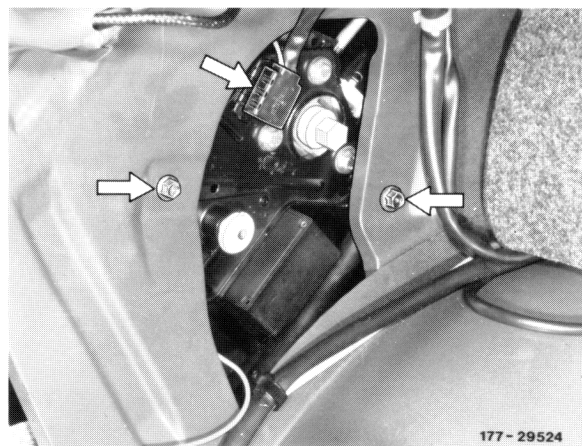

177 - 29524


6 Separate tube as well as outlet tube from gear unit.

7 Remove holder with motor and gear unit.

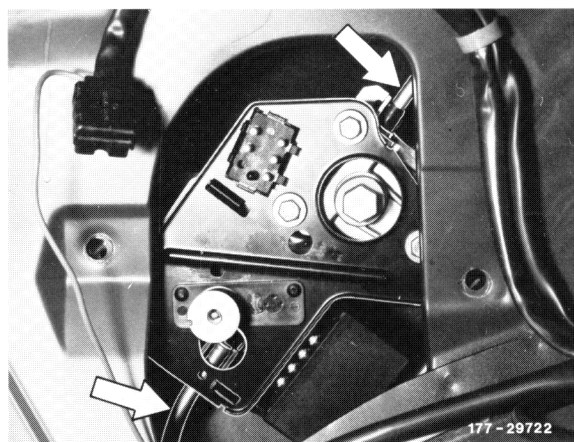

8 Install in reverse order.

Note: When fastening clips of both tubes make sure that bead on tube slips into groove on gear unit.

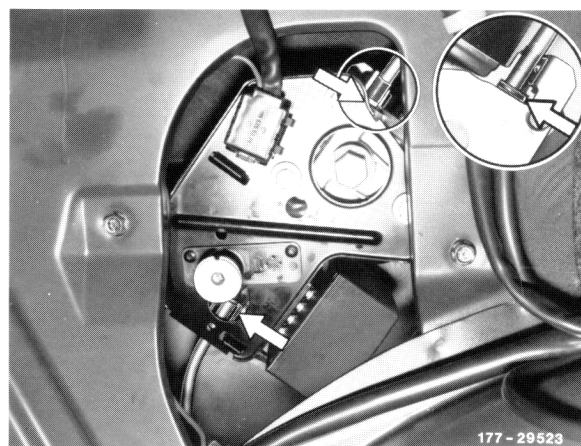


B. Control unit cannot be removed


Removal

1 Remove cover in trunk, left.

2 Force off plastic cap for emergency crank drive and unscrew the hex. nut (17 mm) underneath, while holding shaft of gear unit in position by means of an open-end wrench (6 mm) at the place provided for this purpose.

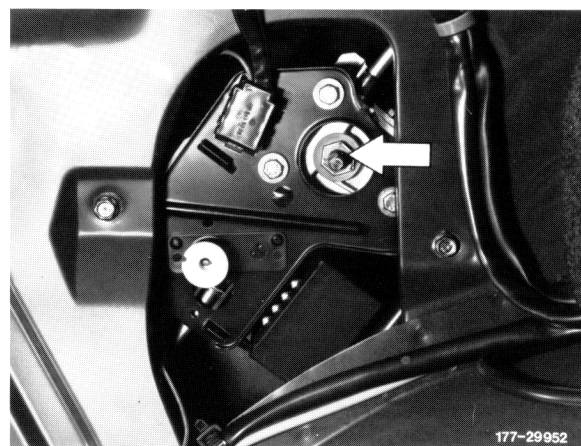


3 Unscrew fastening screws on holder and pull off electrical connection on sun roof motor.

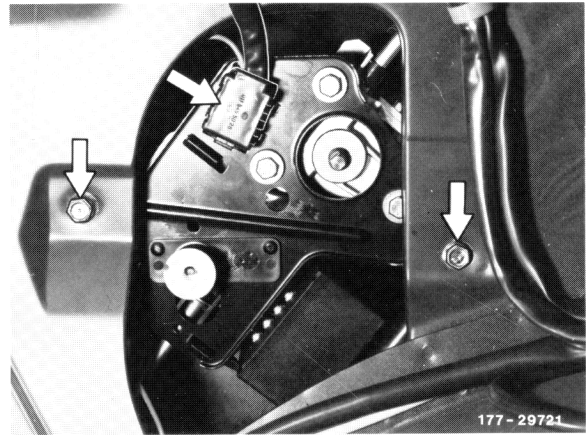


4 Remove plastic cover from holder.

Shown with motor removed

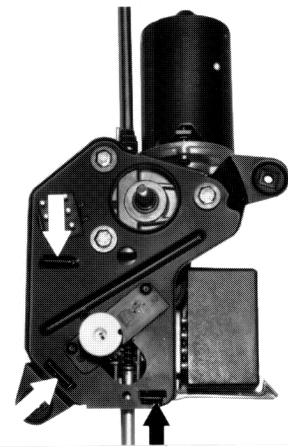

5 Slightly turn holder with motor and unscrew gear unit housing on back.

Shown with motor removed

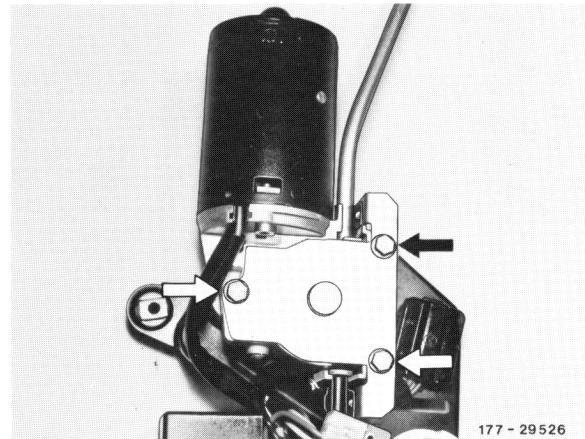


6 Remove gear unit cover, unclipping holding clamp for this purpose, and remove gearwheel.

7 Remove holder with motor and gear unit.

8 Pull control cable forward out of tube.

Shown with motor removed

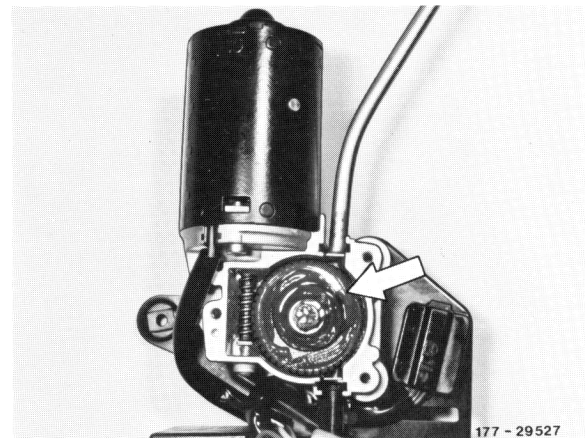

Installation

9 Assemble gear unit.

10 Install holder with motor and gear unit.

Note: When fastening both tubes with clips, make sure that the bead on tube slips into groove on gear unit.

11 For further installation proceed in reverse order.

12 Adjust slip clutch on gear unit (77-195).

