


Operation no. of operation texts and work units  
or standard texts and flat rates .....

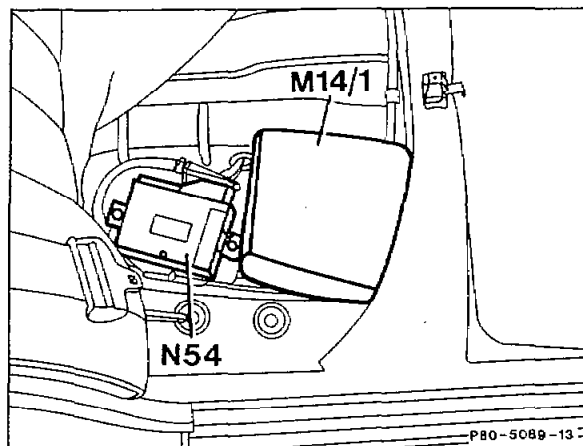

Rear seat bench or right individual rear seat .....	remove, install.
Electrical connector .....	disconnect, connect.
Nuts .....	unscrew, tighten.
Control unit (N54) .....	remove, install.

**Note**

When replacing the control unit or the transmitter key, it is essential to specify the locking mechanism number as both parts are matched.