



Wiring diagram of city driving lamp

- | | | | |
|-------|--|------|---|
| F1 | Fuse and relay box | S4x1 | Plug connection, combination switch |
| N35/1 | City driving lamp control unit GB | W1 | Main ground (behind instrument cluster) |
| S1 | Exterior lamp switch | a | To headlamp unit, low beam |
| S4 | Combination switch | | |

Note

From 10/86 up to 08/89 models for the United Kingdom had to be equipped with a city driving lamp (statutory requirement).

Function

The city driving lamp is switched on with ignition starter switch in position 2 and exterior lamp switch turned to the parking light setting.

The electronics in the city driving lamp control unit (G8) (N35/1) controls the output voltage to the bulbs so that the car is driven with dipped beam headlamps at 10% of their normal brightness.

The city driving lamp control unit (G8) (N35/1) is attached to the cruise control bracket below the plastic cover in the right footwell on the driver's side.

