


## 82-4730 Removing and installing headlamp unit

Preceding work  
 Remove intake air cowl (09-0060)  
 Model 124.034/036 and engine 104

Operation no. of operation texts and work units  
 or standard texts and flat rates:  
 82-4712, 82-4722, 82-4732

Standard and (USA) version

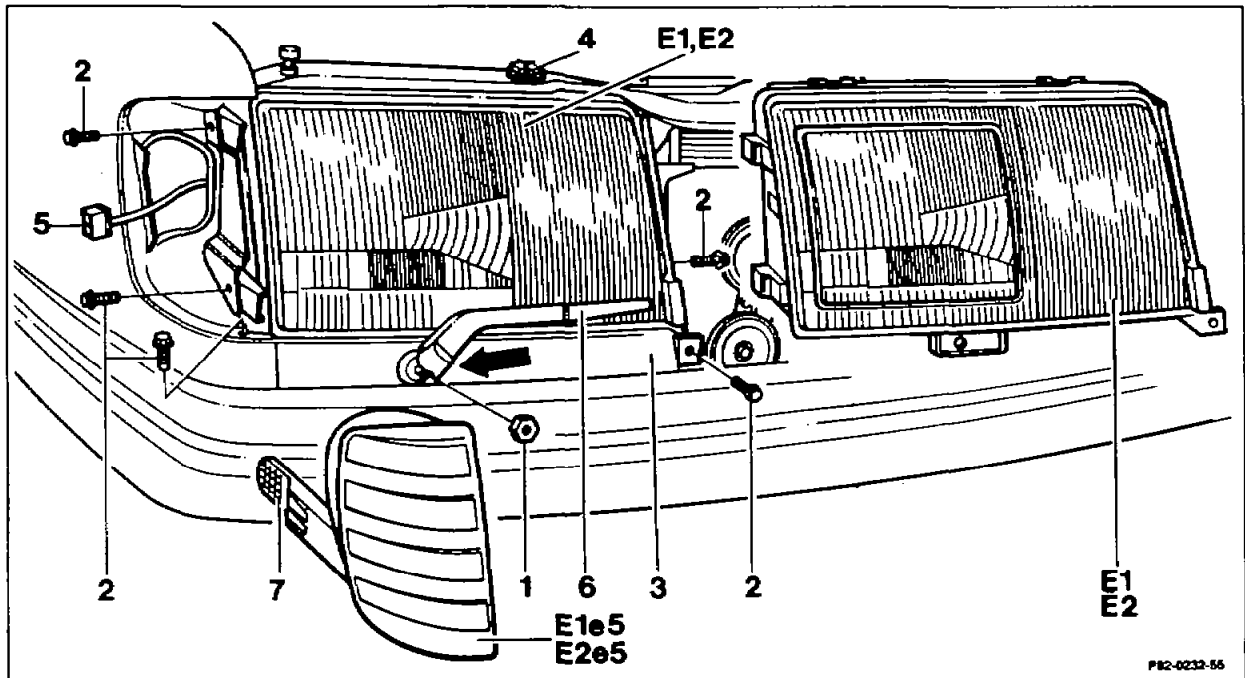

### Vehicles with headlamp wash/wipe system

Cover on wiper arm (arrow) .....	open, close.
Hexagon nut (1) .....	unscrew, screw on.
Wiper arm (6) .....	take off, fit on.
Tube at wiper arm (6) .....	pull off, fit on.

### All vehicles

Turnsignal lamp (E1e5, E2e5) .....	remove, install. To do this, release retaining bar (7) and withdraw turnsignal lamp to the front.
Electrical connection at turnsignal lamp (5) .....	unplug, plug in.
5 hexagon bolts (2) .....	unscrew, screw in.
Cover (3) .....	remove, install.

Locking insert (4) .....	turn 90° to the left and withdraw, insert and turn 90° to the right.
Electrical connection and vacuum line for headlamp range control .....	disconnect, fit on.
Headlamp unit (E1, E2) .....	remove, insert.

**Note**

When removing the right-hand headlamp unit on vehicles with double auxiliary fan, remove the flat springs upward and push the radiator with condensor back slightly.

Headlamp adjustment .....	check, correct if necessary (82-1130).
---------------------------	--