


A. Sedan

Removal, installation

1 Unscrew fastening nuts outside left and right.

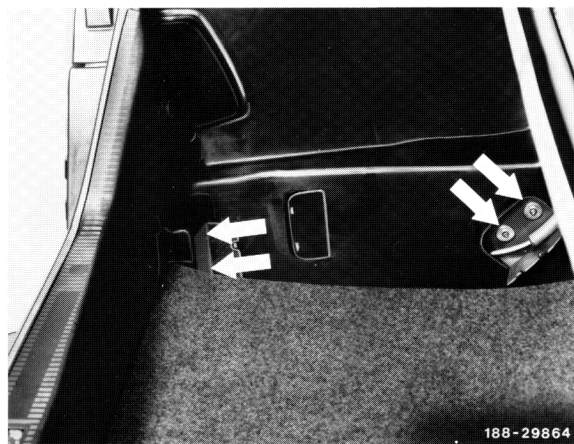

2 Unscrew nuts on rear center piece.

3 Take out front fastening bolts on rear fender and remove bumper in rearward direction.

4 For further installation proceed in reverse order.




B. T-model


1 Remove or open trim at side in loading space.

2 Remove spare wheel.

3 Unscrew fastening nuts outside left and right.

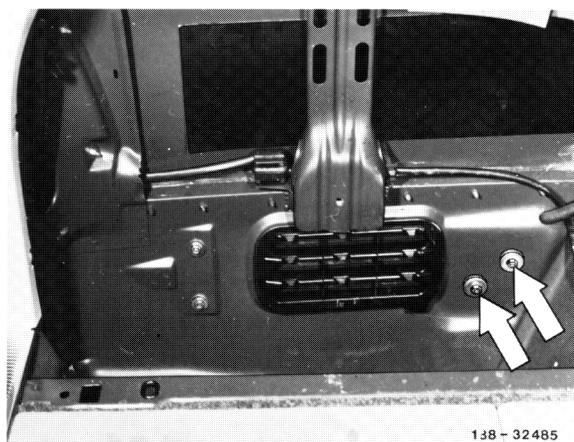


4 Unscrew nuts on rear center piece.

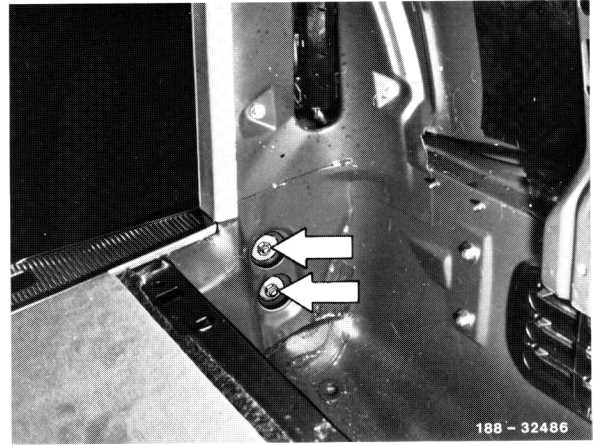


5 Loosen trim at rear of loading space recess and unscrew the two fastening nuts in rear center piece.

6 Extend front fastening bolts on rear fender and remove bumper toward the rear.

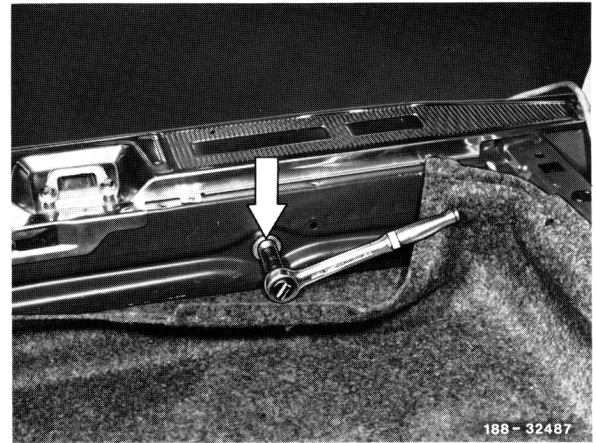

7 Check or mount seal and holder laterally on fender.

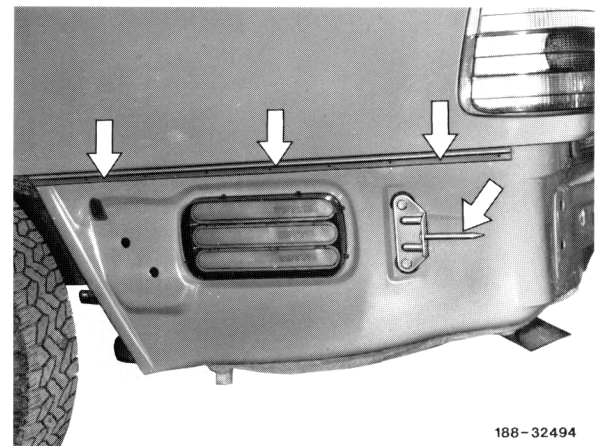

Installation note

When installing bumper, make sure that the eye on the side of the bumper is plugged into holder.

8 For further installation proceed in reverse order.

