


88-310 Removal and installation of control cable for engine hood

Removal, installation

1 Loosen screw on handle, pull handle toward the rear and remove.

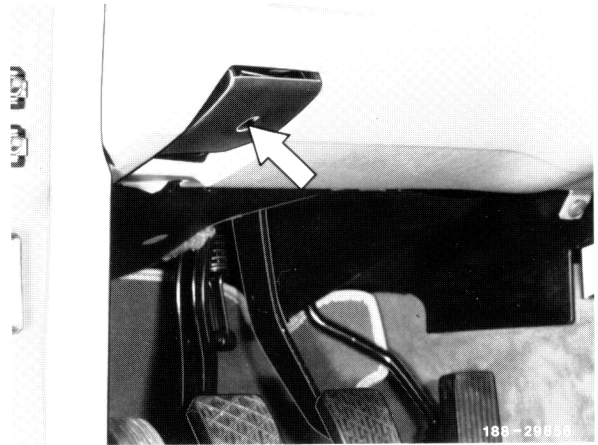


2 Disconnect engine hood control cable on handle.


3 Tie cord to engine hood control cable.

Note: The cord facilitates installation.


4 Expose engine hood control cable on wheel-house (open cable strap and push out of holding clips).

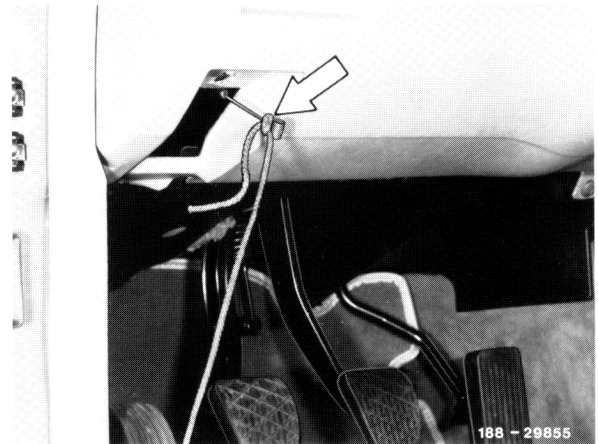

5 Force off holding bracket of rubber grommet and remove rubber grommet.

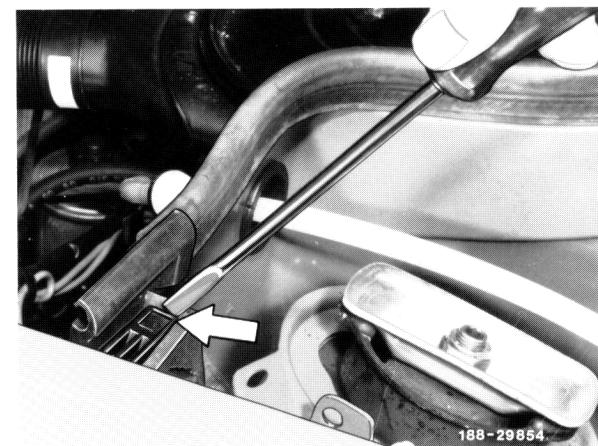

6 Remove clips of cover under engine hood lock (burglar protection), while disengaging detent through hole in radiator reinforcement.

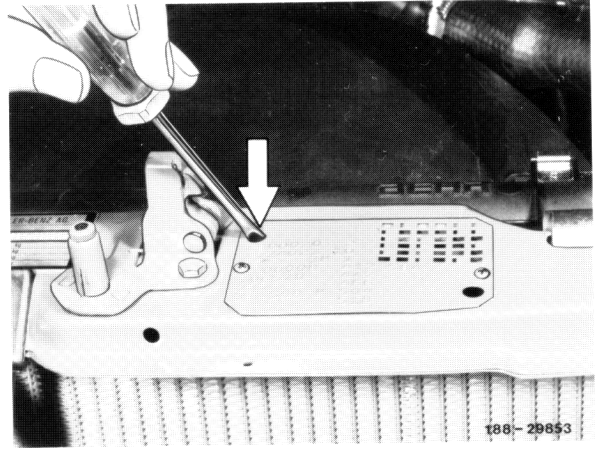


7 Disconnect engine hood control cable at lock.

8 Pull out engine hood control cable.

9 Grease rubber grommet on new engine hood control cable and pull in cable control with cord.

10 For further installation proceed in reverse order.

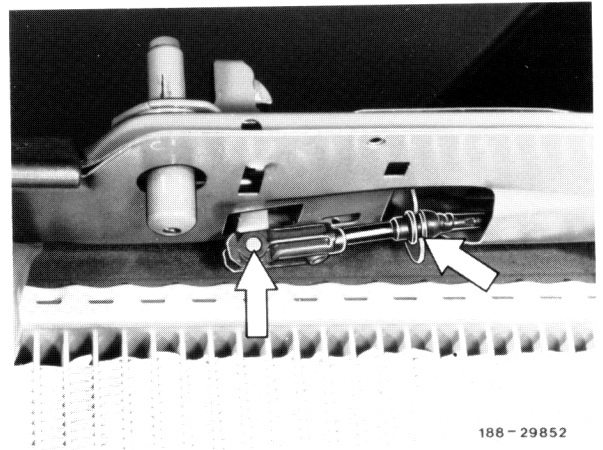

Caution!

Make absolutely sure that the locking hook in housing of engine hood lock can be easily operated and moved in outward direction up to stop.

