

Note

If the outside rear view mirror is continually moving out of adjustment, tighten screw on adjusting mechanism accordingly.


Note: Screw is under cover plate.



A. Mirror glass

Removal, installation

1 Force out mirror glass with plastic wedge and remove to the side.

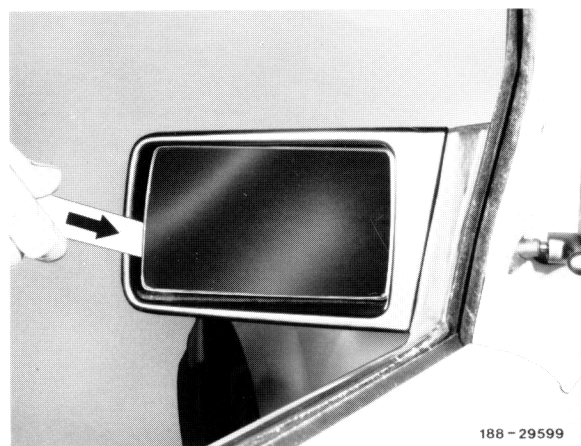

2 Position mirror glass against adjusting lever and force into mounting points.




B. Complete outside mirror

Removal, installation

1 Push plastic lock with screwdriver out of grip and remove grip.



2 Unclip cover plate at top out of door frame and pull out of door trim in upward direction.

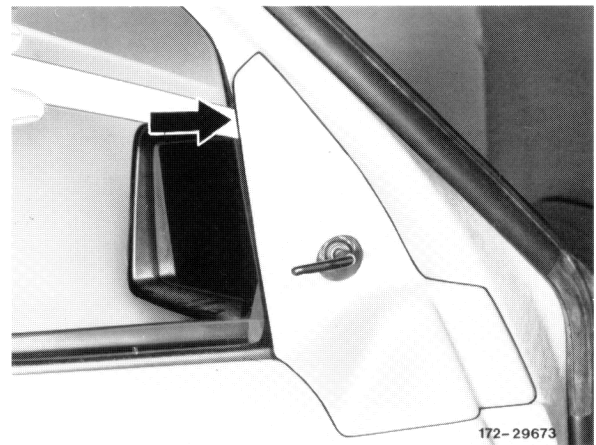

3 Remove screws and take off mirror.

4 For installation proceed in reverse order.

