


**91-182 Removal and installation of driver's backrest cover**

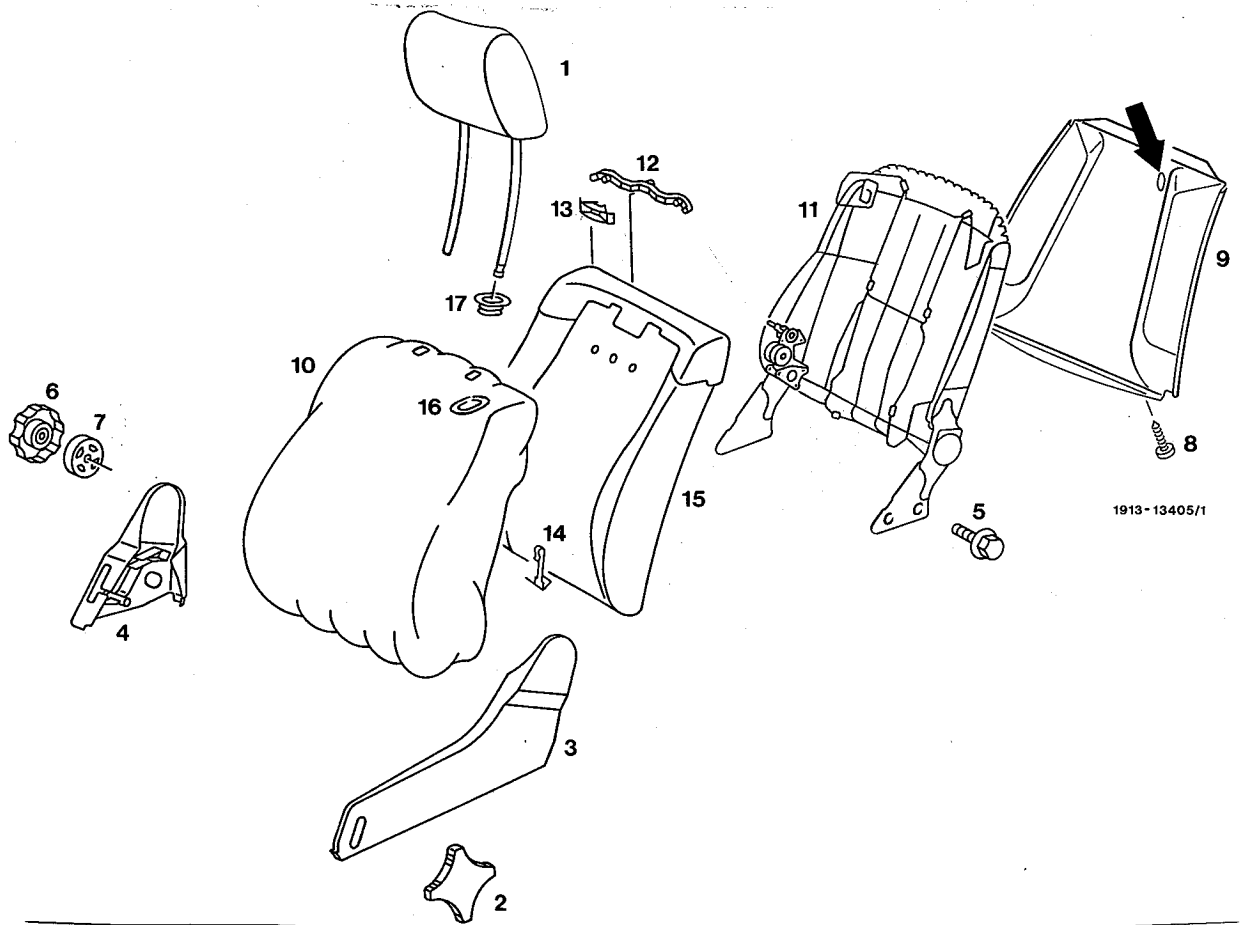

- |  |  |
|--|--|
| Head restraint (1) .....                 | remove and install, for this purpose, set head restraint completely in upward direction, push lock through clamping member (arrow) and pull out head restraint |
| Driver's or front passenger's seat ..... | remove and install   |
| Handwheel (2) .....                      | pull off   |
| Trim (3) and (4) .....                   | force off with plastic wedge   |
| Screws (5) on backrest fitting .....     | unscrew 2 each and remove backrest from seat cushion   |
| Handwheel (6) .....                      | uniformly force off with 2 plastic wedges. Handwheel (6) and cover (7) must be renewed following disassembly   |
| Locks of plastic cover (7) .....         | unbend and remove from shaft   |

Cover (10) .....	pull laterally out of plug-in channel while compressing backrest frame (11)
Screw (8) .....	unscrew 2 each
Clamping member (9) .....	pull downward and remove
Cover (10) .....	disengage at bottom and top
Tightening strip on plastic bracket (12) .....	disengage
Round wire clamp (14) .....	pull out
Backrest frame (11) of rubber hair mat (15) .....	remove
Clamp (13) .....	disengage 8 each and release nettle cloth laterally of rubber hair mat (15)
Rosette (16) .....	carefully separate with screwdriver and remove eye (17)
Cover (10) .....	remove from rubber hair mat. For installation proceed vice versa.