


91-190 Removal and installation of tensioning member on driver's or front passenger backrest


- 1 Unscrew screw (2 each) on clamping member below.

Shown with driver's seat removed

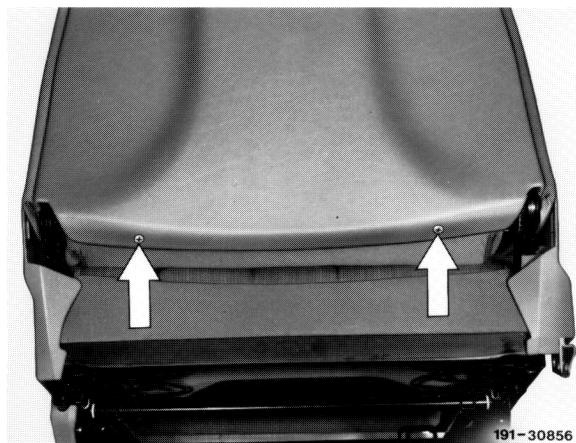

- 2 Pull backrest covering laterally at left and right out of plug-in channel while compressing backrest frame.

Shown with driver's seat removed

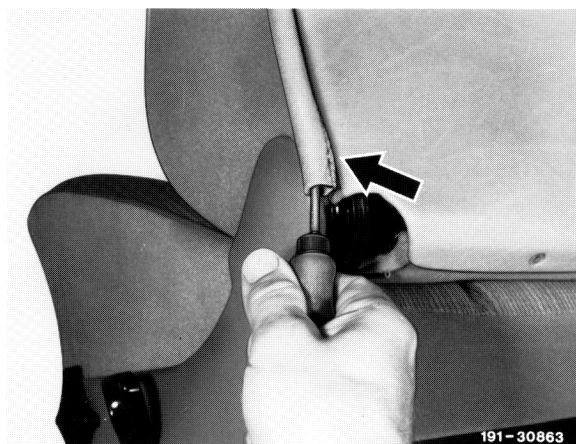

- 3 Pull off clamping member in downward direction.

- 4 For installation proceed vice versa.

Shown with driver's seat removed

