



<b>P17</b>	AP98.30-P-8070-07A	Cleaning light-alloy disk wheels	All models	
------------	--------------------	----------------------------------	------------	--

**Repair materials**

Number	Designation	Order no.
BR00.45-Z-1021-04A	Intensive cleaner for light-alloy wheels and wheel covers	001 986 35 71

Cleaning light-alloy disk wheels is easier if a sponge-brush is used.

**Instructions**

Apply intensive MB light-alloy wheel cleaner to wheel and allow to act. Remove brake dust in ventilation apertures using sponge-brush. Then spray down light-alloy wheel using a hose or a high-pressure cleaning unit..

**i** To prevent damage to tires or paintwork, only direct the jet of water from the high-pressure cleaner at a single point on the tire or wheel very briefly on each pass. In addition, maintain a minimum distance of 300 mm.