


A. Sedan

Special tool

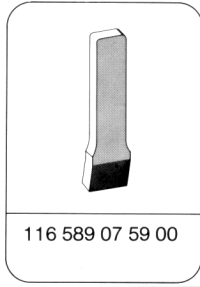

Removal, installation


- 1 Force off lower covering.




Note:

To make sure that the covering is not damaged when forced off, position plastic wedge in range of plug-in clips (7 each) only.


- a 100 mm
- b 120 mm
- c 260 mm

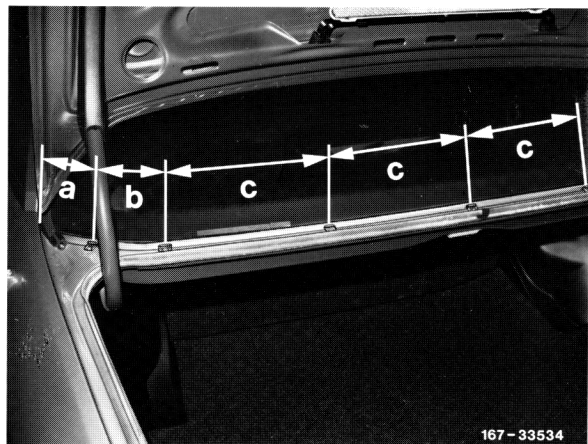


2 Unscrew screw.

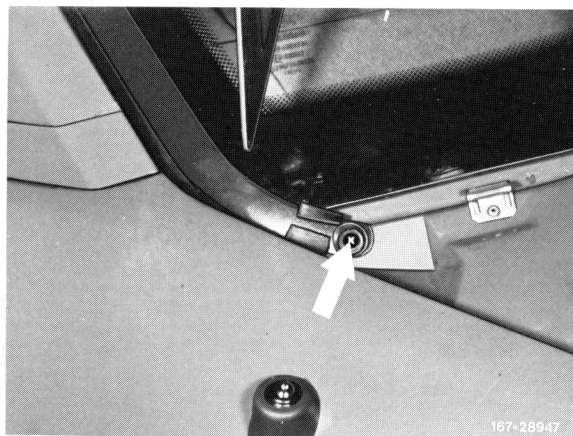


3 Push connecting link aside.

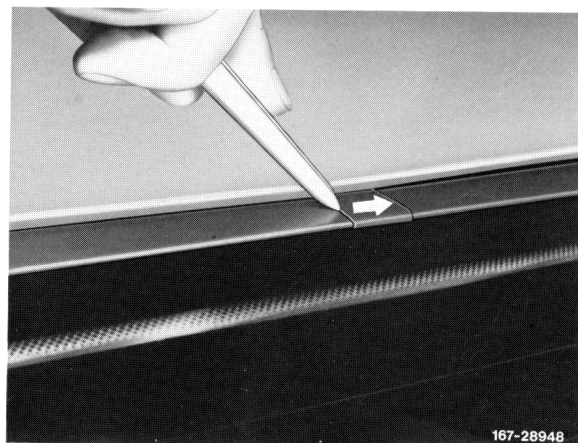


4 Place rubber lip on upper corners above trimstrip.

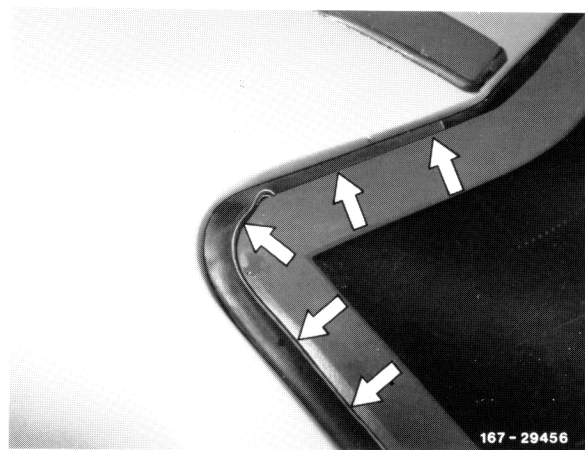


5 Push rubber cover on trimstrip aside and apply soap water all-around between rubber and body.

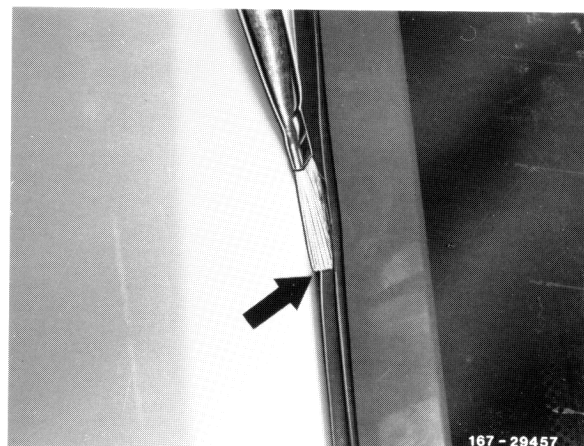


6 Push trimstrip outwards starting from below up to upper edge with drift. Then force trimstrip at top from connecting link toward corner in upward direction from pane.

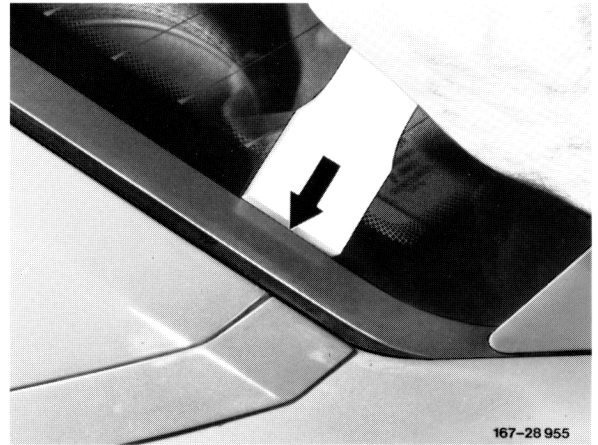

Note: If a trimstrip is stuck, apply counterhold with plastic wedge so that the trimstrip cannot twist.

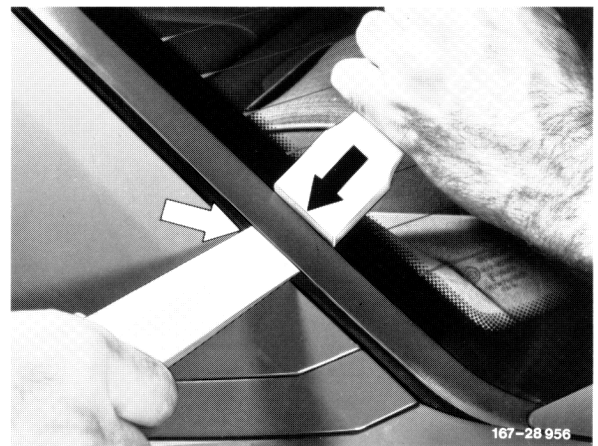


7 Pull out trimstrip at top starting from center. Remove link (arrow) on respective trimstrip half prior to pulling out.

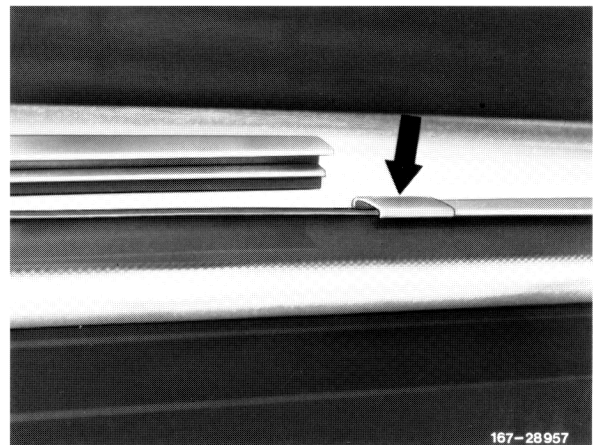


8 Coat holding groove in trimstrip with soap water and slip trimstrip starting from corner on pane.

9 For further installation proceed vice versa.

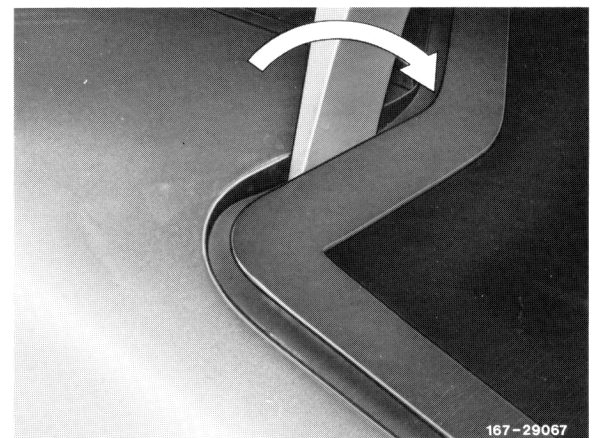


B. Coupe

Special tool

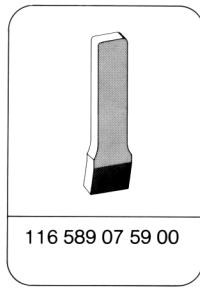


Removal and installation

1 Push connecting links at top and bottom aside.

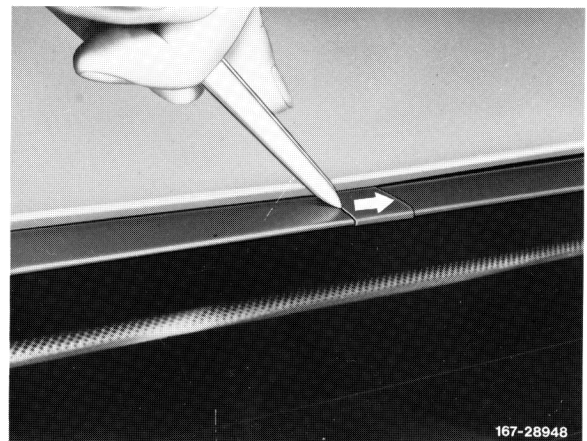


2 Force trimstrip left and right from direction of center (top) from pane by means of special tool part no. 116 589 07 59 00.

3 Force off trimstrip below.

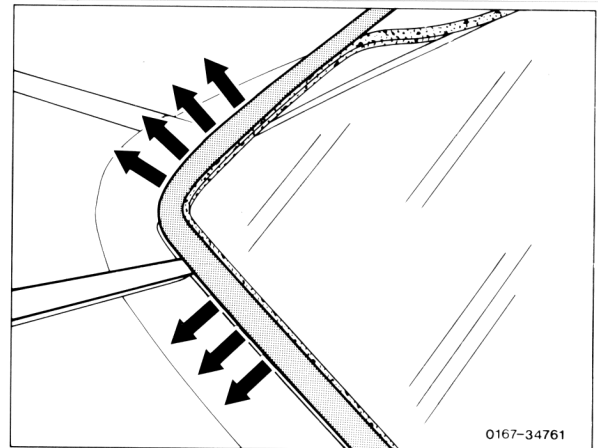


Note: If trimstrip is stuck, apply counterhold with plastic wedge so that the trimstrip will not be twisted.

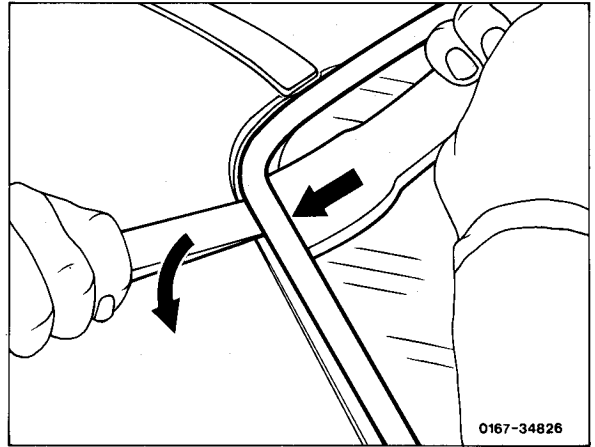

4 Plug molder rubber strip onto pane.

Note: Serrations should be at inside of pane.

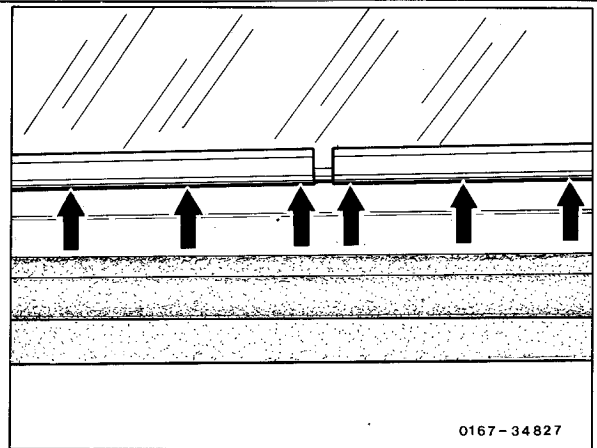

8 Coat holding groove in trimstrip with soap solution and press trimstrip on pane from direction of corner.

9 For further installation proceed vice versa.

